

electriciQ

USER MANUAL



49" LED MONITOR

eiQ-49CV5UWD120FSHQA

Thank you for choosing electriciQ

Please read the user manual before using this monitor and keep it safe for future reference

Visit www.electriQ.co.uk to view our entire range of Intelligent Electricals

CONTENTS

SAFETY	3
WHATS INCLUDED	5
STAND INSTALLATION	6
WALL MOUNTING	7
CONNECTIONS	8
GETTING STARTED	9
MONITOR CONTROLS	9
INITIAL SET UP	9
SHORTCUT BUTTONS	10
MENU OPTIONS	10
OSD MENU	11
INPUT	11
BRIGHTNESS/CONTRAST	11
COLOUR	12
PICTURE QUALITY	12
DISPLAY	13
AUDIO	13
MULTI-WINDOW	14
OSD	14
OTHER	15
TECHNICAL SPECIFICATION	16
TROUBLESHOOTING	17
SUPPORT	17

SAFETY INFORMATION

 
- Read these instructions - All the safety and operating instructions should be read before this product is operated.
- Keep these instructions - The safety and operating instructions should be retained for future reference.
- Heed all warnings - All warnings on the appliance and in the operating instructions should be adhered to.
- Follow all instructions - All operating and usage instructions should be followed.
- Do not use this equipment near water, or in humid environments - The appliance should not be used near water or moisture e.g. in a wet basement or near a swimming pool.
- Clean only with a dry cloth. Do not use solvents or petroleum-based fluids.
- Do not block any ventilation openings.
- Do not install near any heat sources such as radiators, stoves or other apparatus (including amplifiers) that produce heat.
- Do not tamper with the supplied plug. This plug is a BS1363 standard plug.
- Protect the power cord from being walked on or trapped, particularly at the plug and at the point where it exits from the appliance.
- Only use attachments/accessories specified by the manufacturer.
- Use only with a cart, stand, tripod, bracket or table specified by the manufacturer or sold with the apparatus. When a cart or stand is used, use caution when moving it to avoid any injuries or damage from it tipping over.
- Unplug the apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as if the power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus or it has been exposed to rain or moisture, it does not operate normally or has been dropped.
- Please keep the unit in a well-ventilated environment.
- The monitor should only be connected to a mains power supply as rated on the back of the equipment.
- To prevent overload, do not share the same power supply socket with too many other electronic components.
- Do not place any connecting wires where they may be stepped on or tripped over.
- Do not place heavy items on the cable as this may cause damage.
- When removing from a socket hold by the plug and not the wires.
- Disconnect the power immediately and seek professional help if the plug or cable is damaged, liquid has spilt onto the unit, if accidentally exposed to water or moisture, if anything accidentally penetrates the ventilation slots or if the unit does not work normally.
- Do not remove the safety covers. There are no user serviceable parts

inside. Trying to service the unit yourself is dangerous and may invalidate the product's warranty. Only qualified personnel should service this apparatus.


- Do not block ventilation slots on the back cover. The monitor can be placed in a cabinet but ensure at least 5cm (2") clearance all around. Do not tap or shake the screen, this may damage internal components.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and objects filled with liquids, such as vases, shall not be placed on the apparatus.
- **WARNING:** The wall plug socket is used as a disconnection device and should remain readily accessible.
- **WARNING:** The batteries shall not be exposed to excessive heat such as direct sunlight or fire.
- Although every effort is made to maintain the accuracy of the manual, due to continuous product development, some variation from the manual is possible.
- The availability of features and settings may vary depending on the input source and method of connection.
- Although every effort is made to maintain the accuracy of the manual, due to continuous product development, some variation from the manual is possible.
- The availability of features and settings may vary depending on the input source and method of connection.
- The available resolutions and refresh rates may be limited by the capabilities and/or settings of the source device.

 AT FULL VOLUME, PROLONGED LISTENING MAY DAMAGE THE USER'S HEARING.		
 <p>This warning sign is to warn of dangerous voltage inside the product.</p>	CAUTION <small>RISK OF ELECTRIC SHOCK, DO NOT OPEN</small> <p>CAUTION: To reduce the risk of electric shock, DO NOT remove the cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.</p>	 <p>This warning sign is to alert you of important instructions accompanying the product.</p>


WHAT'S INCLUDED



MONITOR

 

SCREW BOLTS

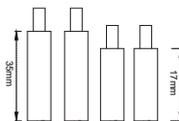

MOUNTING SCREW BOLTS




DP CABLE



POWER SUPPLY




REMOTE CONTROL

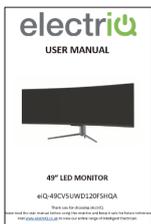

USER MANUAL



 
STAND (UPRIGHT SECTION)




STAND BASE

STAND INSTALLATION


1. Open the package, take out the product with foam still attached, and gently place it on a desktop or table.

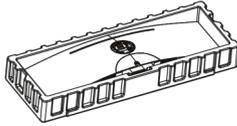


2. Take out the two main parts of the stand. Then use the screwdriver (not included) and the screws to fasten base to the stem.

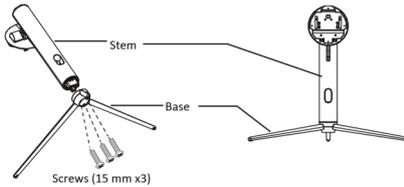

3. Align the stand stem's bracket with the opening on the back of the monitor and carefully insert bracket. The pieces should click into place.

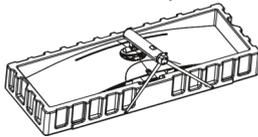

4. Before removing the stand, remove the port cover from the back of monitor. Switch the button down to remove the monitor from the bracket.

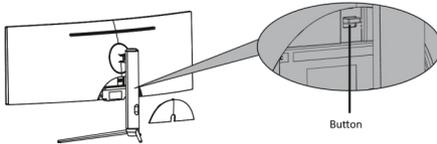

Keep the foam underneath the monitor before attaching the stand.
To avoid damage, do not touch the screen when moving the monitor.


NOTES:

- Due to the heavy weight and dimensions of the LCD screens and their fragile nature, we recommend that they are unpacked and assembled by 2 people.
- electriQ and its distributors and dealers are not liable or responsible for damage or injury caused by improper installation, improper use or failure to observe these safety instructions. In such cases any guarantee will expire.
- The stand can be removed from the rear of the monitor by pressing the quick release button on the rear of the monitor.


WALL MOUNT INSTALLATION

This monitor ONLY includes screws which may be used when attaching the monitor to a mount. No mount or mounting accessory is included.

1. Open the package, take out the product with foam still attached, and gently place it on a desktop or table. Remove the extra parts and the foam covering the monitor. If the monitor was already attached to the stand, remove the stand.

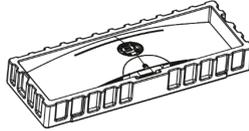


2. Remove the original screws x 4 from the opening in the back of the monitor. Follow the directions received with your mount, stand, or accessory and install the monitor on the wall or fixture as desired. Remember to use the included screws when attaching anything to the back of the monitor.

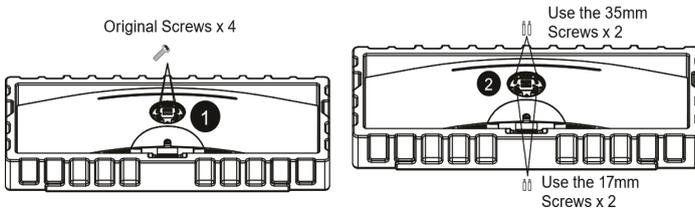

- Use only the Screws (35 mm x 2 pcs, 17mm x 2 pcs) provided with this type of installation.

Do not discard the original screws as these may be needed for future use.


3. Follow the directions received with your mount, stand, or accessory and install the monitor on the wall or fixture as desired.

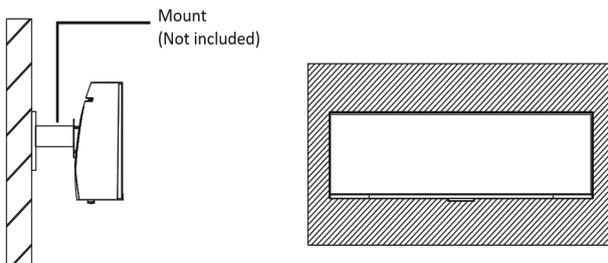

NOTES:

- Do not pinch the screen directly with your hand when hanging the product to prevent the screen from breaking.
- Due to the heavy weight and dimensions of LCD screens and their fragile nature, we recommend that they are unpacked and assembled by 2 people and professional installers are used to wall mount them (Wall mounting is optional).
- If you do not understand the instructions, or are unsure how to install this product, please contact a professional for assembly advice and assistance.
- Careful consideration should be made regarding the location the monitor is to be wall mounted as some walls are not suitable for installation. If the monitor is to be mounted on drywall, the mount must be anchored into a wooden stud, concrete block or brick behind the drywall. Installing on drywall alone may not support the weight of the display.
- When drilling holes, it is particularly important to take care of electrical cables, water or gas pipes in the wall. Please follow the instructions provided by the wall bracket manufacturer and ensure that all fixing screws supplied are used.
- electriQ and its distributors and dealers are not liable or responsible for damage or injury caused by improper installation, improper use or failure to observe these safety instructions. In such cases any guarantee will expire.


CONNECTIONS AVAILABLE ON THE MONITOR

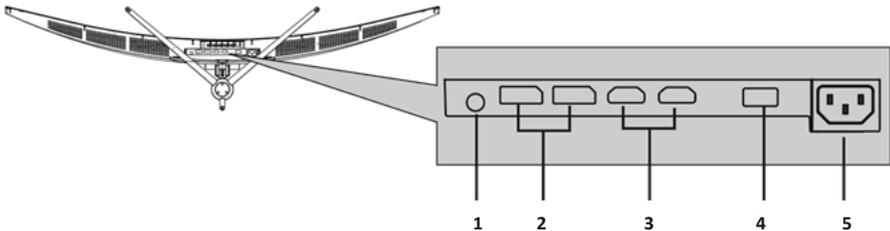

1	Audio Output: Insert one end of the Audio cable into the computer's Audio output to receive the Audio signals from your monitor.
2	DP Connector: Insert one end of the DP cable into the computer's DP output and connect the other end to the monitor's DP port.
3	HDMI Connector: Insert one end of the HDMI cable into a suitable HDMI source. HDMI output and connect the other end to the monitor's HDMI port.
4	USB: USB 2.0 connection.
5	Power Connector: Insert the power connector to supply power.

GETTING STARTED

MONITOR CONTROLS

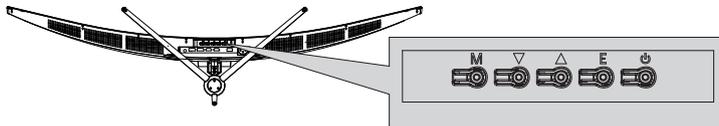

E Select signal source or Exit the menu


▲ Go Up within the Main Menu or increase the value of the selected item

▼ Go Down within the Main Menu or decrease the value of the selected item

M Enter the Main OSD Menu and Select submenu

⏻ Turn the monitor on or Off

INITIAL SETUP

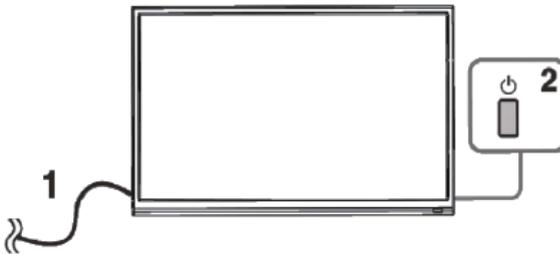


CONNECT THE MONITOR TO A POWER OUTLET

1. Press the POWER button on the monitor or to turn it on (The indicator will be blue)
2. Connect the relevant cable to the corresponding input on the monitor. The source will be automatically detected.

SHORTCUT BUTTONS

The monitor includes one touch options to access common settings.

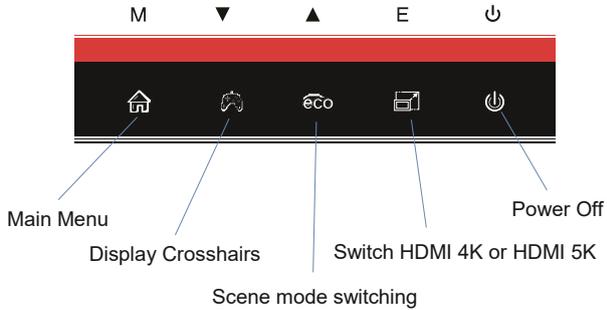


MENU OPTIONS

The menu for the monitor can be accessed by pressing the menu button on the control panel. This menu is separated into the following sub menus: Input source, Brightness/Contrast, Colour Settings, Picture Quality Settings, Display, Audio, OSD (On screen display), and other . Details of each menu can be found in the following section.

OSD MENU

INPUT SOURCE

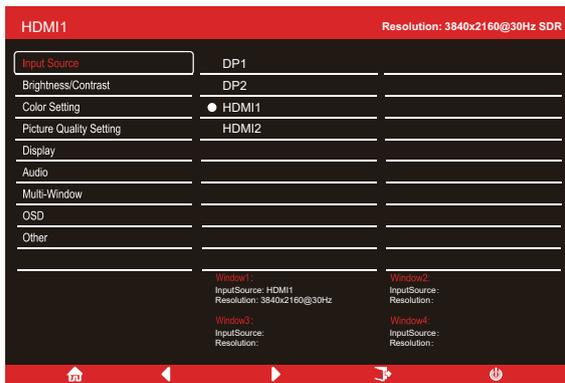

Signal | Switch the signal input or select the source. DP 1, DP2, HDMI1, HDMI2

BRIGHTNESS/CONTRAST



Brightness	Adjust the brightness of the display between 0 and 100.
Black level	Adjust the black level of the display between 0 and 100.
Contrast	Adjust the contrast of the display between 0 and 100.
DCR	Turn the Dynamic Contrast Rao Feature On or Off.

COLOUR SETTINGS




Gamma	Change the Gamma value for the display between 1.8, 2.0, 2.2, 2.4, 2.6
Picture Mode	Change the picture mode between Standard, Photo, Movie, Game, FPS and RTS.
Colour Temperature	Change the Colour Temperature of the display to Normal, Warm, Cool or User. When the User Mode is selected, the Red, Green, and Blue values can be adjusted independently between 0 and 100.
Low Blue Light	Change the blue light emitted by the display between 0 and 100.
Hue	Change the Hue value between 0 and 100.
Saturation	Change the Saturation of the display between 0 and 100.

PICTURE QUALITY SETTINGS




Sharpness	Change the display Sharpness between 0 and 100.
Response Time	Turn the Response Over Drive feature between Off, High, Middle of low
Noise Reduction	Adjust the level of Noise Reduction between Low, Medium, High, or Off.
Dynamic Luminance Control	Turn the Dynamic Luminance Control feature On or Off.

DISPLAY

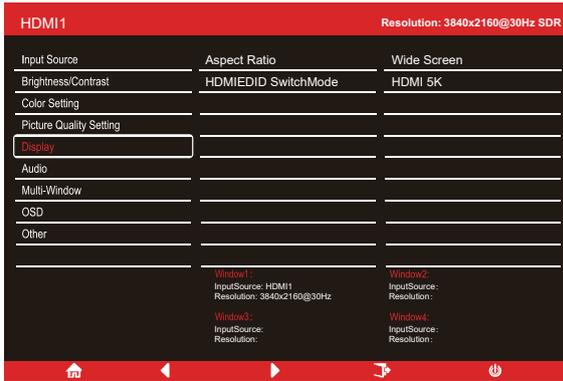

Aspect Ratio	Change the image aspect ratio to Wide Screen. 4:3 Auto. 1:1
HDMI Switch Mode	Change switch between HDMI 4K or HDMI 5K.

AUDIO

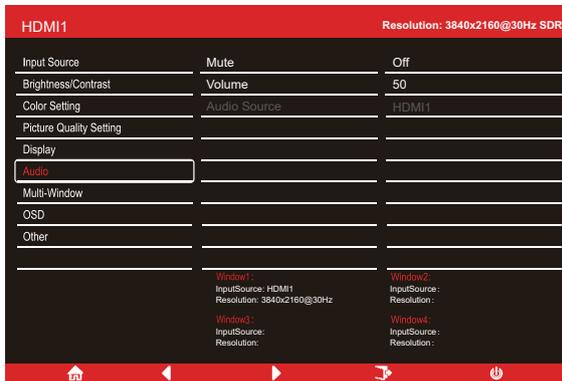

Mute	Turn On and off to mute and unmute the audio output.
Volume	Adjust the output volume between 0 and 100.

MULTI-WINDOW




Multi-Window	Choose the different formats of multi window display between Off, Picture in Picture (PIP) and Picture By Picture (PBP 2Win)
Sub Win2 Input	Choose the source of the second window between DP1 , DP2, HDMI1, HDMI 2.
Sub Win3 Input	Choose the source of the second window between DP1 , DP2, HDMI1, HDMI 2.
Sub Win4 Input	Choose the source of the second window between DP1 , DP2, HDMI1, HDMI 2.
SWAP	Swap the Primary and Secondary inputs on screen.

OSD



Language	Change the OSD Menu display language between English, Chinese, Korean, Russian, Spanish, Japanese and French.
OSD H Position	Change the horizontal position of the OSD Menu between 0 and 100.
OSD V Position	Change the vertical position of the OSD Menu between 0 and 100.
OSD Transparency	Change the transparency value of the OSD Menu between 0 and 100.
OSD Time Out	Change how long the OSD Menu is on before it atomically exits.
OSD Rotation	Change the OSD Rotation Normal,90,180,270

OTHER

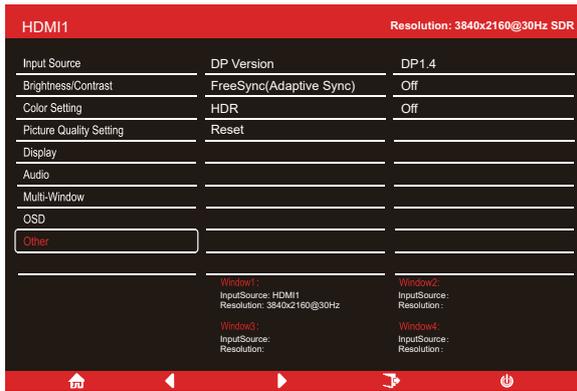

DP Version	Change the DP version
FreeSync (Adaptive Sync)	Turn Free Sync On or Off.
HDR	Turn the HDR on or off.
Reset	Restore factory default setting.

SPECIFICATION

Product Model		eiQ-49CV5UWD120FSHQA
Screen Size		49" Diagonal
Panel Type		VA Panel
Aspect Ratio		21:9
Power Supply		AC 100-240V ~ 50/60Hz, 2.0A
Power Consumption		80W Type, 105W Max
Dimensions (with stand)		1178.4 * 466.02 * 240 .18 mm
Net / Gross Weight		11.0 kg / 14.8 kg
Picture	Maximum Resolution	5120 * 1440
	Brightness	350 cd/m ²
	Static Contrast	3000:1
	Viewing Angle (H/V)	178° / 178°
	USB Input	USB 2.0 x 1
	HDMI Input	HDMI 2.0 x 2
	Display Port Input	DP 1.4 x 2
	Audio Output	x 1 (Headphone Socket)
	Remote Control	2m Maximum operating distance
Working Temperature		0°C - 40°C
Working Humidity		10% - 85% Non-condensing
Speaker Specifications		8 Ω / 3 W

TROUBLESHOOTING

Problem	Solution
No power	Insert the plug securely into the power outlet.
No picture	Ensure that the equipment is connected properly.
	Ensure the correct input is selected.
Buttons on the monitor don't do anything	Disconnect the power plug and then reconnect it. (The unit may not be operating properly due to lightning, static, or other factors.)
Noise or other interference	Electronic equipment near the unit may be causing interference. Relocate the unit or move the equipment.

ENVIRONMENTAL PROTECTION



waste recycling centers

Recycling facilities are now available for all customers at which you can deposit your old electrical products. Customers will be able to take any old electrical equipment to participating civic amenity sites run by their local councils. Please remember that this equipment will be further handled during the recycling process, so please be considerate when depositing your equipment. Please contact the local council for details of your local household

electriQ UK SUPPORT

www.electriQ.co.uk/support

Call: 0330 390 3061

Office hours: 9AM - 5PM Monday to Friday

www.electriQ.co.uk

Unit J6, Lowfields Business Park
Lowfields Way, Elland
West Yorkshire, HX5 9DA

物料号码	108.007.13171		
厂内型号	H3CQR-HQ	厂外型号	eIQ-49CVSUWD120FSHQ
物料名称	说明书	品 牌	ElectriQ
协力厂商		日 期	2020.12.07
规 格	140*197mm		
要 求	封面封底120G铜版纸, 内页80G铜版纸 彩色骑马订		
版 本		设 计	zhanglei
确 认		核 准	

备注：不够页数在封面封底的内页加空白页