



Aether Cone

CONTENTS

Device Overview – Pg. 2

Wi-Fi Playback Setup – Pg. 3-4

Edit Connectivity Settings – Pg. 5

Connect Via Airplay – Pg. 5

Connect Via AllCast – Pg. 5

Connect Via Spotify Connect – Pg. 5



Connect Via Bluetooth – Pg. 6

Hard Reset – Pg. 6

Factory Reset – Pg. 6

Support – Pg. 7

DEVICE OVERVIEW

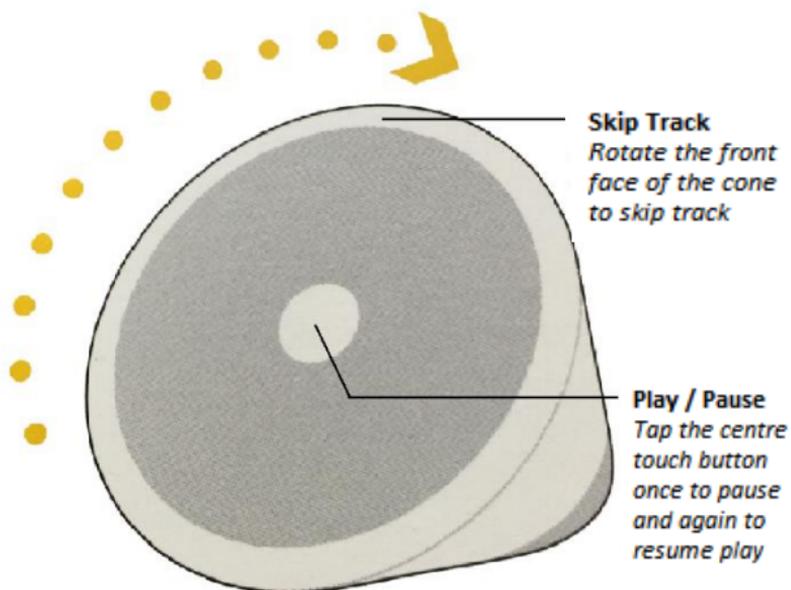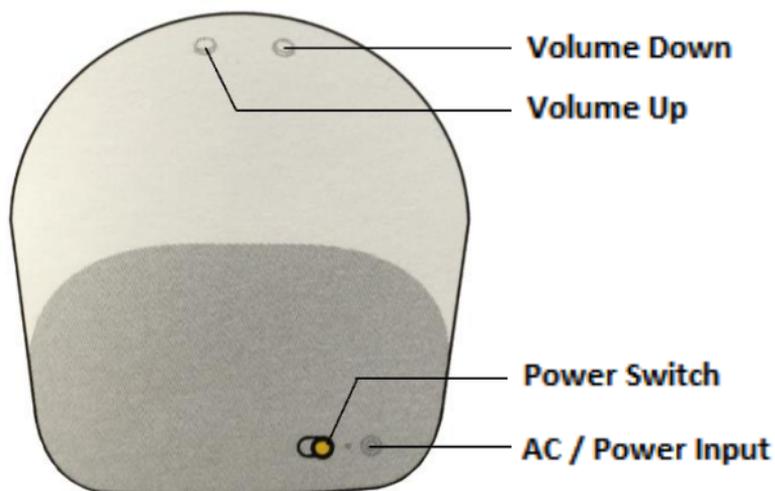

WI-FI PLAYBACK SETUP

1. Connect the Cone to the power supply and turn it on by sliding the power switch to the right.
2. The light in the middle of the front of the Cone will start spinning. When it changes to a pulsing light the cone is ready to begin setup.
3. Cone creates its own Wi-Fi hotspot. Using the Wi-Fi on your chosen device, search and connect to the "Aether Cone XXXXXX" network.



4. On your selected device (mobile phone, tablet, laptop or desktop pc) open your favourite browser and type 192.168.226.1 in the navigation bar.



5. This will connect you to the configuration page where you need to:
- Name your Cone (useful for multiple devices i.e Living Room, Kitchen, Bedroom)
 - Add your Airplay password (If applicable)
 - Scan & select your local / home Wi-Fi network
 - Enter your home Wi-Fi password
 - Once done you can then press Submit.

The screenshot displays the 'cone configuration' app interface on a mobile device. At the top, the status bar shows 'T-Mobile', signal strength, Wi-Fi, time '14:43', and IP address '192.168.226.1'. The main title is 'cone configuration'. Below it are several input fields: 'device name' with the value 'Aether Cone', 'airplay password' with the value 'airplay password', 'wifi network' with a dropdown menu showing 'EasyUP' and a refresh button, and 'wifi password' with the value 'password'. A 'wifi strength' indicator shows '61%'. At the bottom, there are two radio buttons: 'dhcp' (selected) and 'manual'. Two large yellow buttons are at the very bottom: 'SUBMIT' and 'CANCEL'.

6. Setup is now complete and you can now re-connect to your own Wi-Fi network

EDIT CONNECTIVITY SETTINGS

1. To change your Device name, Airplay settings and Wi-Fi network settings press and hold the volume down button and tap the centre button 3 times quickly. The centre light will pulse when this is successful.
2. Repeat steps 2-6 from Initial Setup


CONNECT VIA AIRPLAY

1. To connect via Airplay you need to make sure you that if you have a password, you must enter it in the setup settings. Refer to “Edit Connectivity Settings”.
2. Select Aether Cone in your Airplay menu and begin playing your music.




CONNECT VIA ALLCAST

1. Start AllCast and the “Aether Cone XXXXXX” should be displayed under devices.
2. Select Aether Cone in your AllCast device menu and begin playing your music through the gallery.

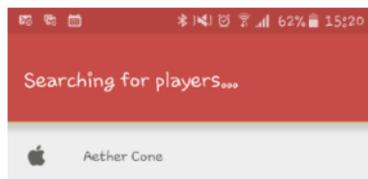

CONNECT VIA SPOTIFY CONNECT (PREMIUM ONLY)

1. Start Spotify and the “Aether Cone XXXXXX” should be displayed under devices available.
2. Select Aether Cone in your Spotify device menu and begin playing your music.

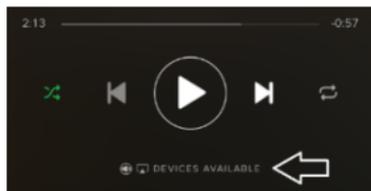

CONNECT VIA BLUETOOTH

1. To connect via Bluetooth press and hold the volume up button and tap the centre button three times quickly.
2. The Cone will now show up when you search for Bluetooth items on your chosen device.
3. Connect to the Cone and begin playing your music.



HARD RESET

1. Plug the Cone into the mains power.
2. Turn the power switch on and hold down both volume buttons for 10 seconds or until the centre light flashes red.
3. Let go of the buttons and your Cone will reset.

FACTORY RESET

1. Make sure your Cone is powered on.
2. Hold down the volume down button and rotate the front dial clockwise then counter clockwise until the centre light flashes red.
3. Let go of all buttons and turn the Cone off then on again.
4. When the Cone starts up the front light should be pulsing white.
5. All of your data will now have been wiped off of the Cone.

SUPPORT

For technical and warranty support please visit

<http://www.buyitdirect.co.uk/content/customerservice.asp>

Buy It Direct Group, Neptune Way, Leeds Road, Huddersfield, HD2 1UA

IMPORTANT SAFETY INSTRUCTIONS

- Carefully read the instructions before operating the unit
- This appliance is for indoor use only.
- Rating: This unit must be only connected to a 220-240 V / 50 Hz earthed outlet.
- Installation must be in accordance with regulations of the country where the unit is used.
- If you are in any doubt about the suitability of your electrical supply have it checked and, if necessary, modified by a qualified electrician.
- Disconnect the power plug from socket before dismantling, assembling or cleaning.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities. It is also not intended for use by those with a lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Do not clean the unit by spraying it or immersing it in water. If water is spilled on the speaker please discontinue use.
- Never connect the unit to an electrical outlet using an extension cord. If an outlet is not available, one should be installed by a qualified electrician.
- Never operate this appliance if the cord, power adapter or plug is damaged. Ensure the power cord is not stretched or exposed to sharp object/edges.
- A damaged power adapter or supply cord should be replaced by the manufacturer or a qualified electrician in order to avoid a hazard. Never use "compatible" power supplies with this appliance only the one supplied by the manufacturer
- Any service should be performed by an authorized service representative. Failure to comply could result in a voided warranty. Do not attempt to replace the internal battery.
- Do not use the appliance for any other purposes than its intended use.
- Do not tilt the unit while in use. The unit is design to work only in vertical position
- Never use the mains plug as a switch to start and turn off the speaker. Use the provided ON/OFF switch located at the back of the unit.
- Always place the unit on a dry and stable surface.
- Do not place the unit next to heat sources (e.g. Electrical fires, fireplaces, etc.)
- If any overheating in the power adapter or the unit is noticed please discontinue use and contact the service centre.
- Do not cover the unit during its operation.
- For best performance the minimum distance from a wall or objects should be 30 cm

EU Compliance Statement: All models of Aether Cone comply with IEC 60950-1

IC: 11889A-90000001

CAN ICES-3(B)/NMB-3(B)



Disposal: Do not dispose this product as unsorted municipal waste. Collection of such waste must be handled separately as special treatment is necessary.

Recycling facilities are now available for all customers at which you can deposit your old electrical products. Customers will be able to take any old electrical equipment to participating sites run by their local councils. Please remember that this equipment will be further handled during the recycling process, so please be considerate when depositing your equipment. Please contact the local council for details of your local household waste recycling centres.