 


electrici

USER MANUAL

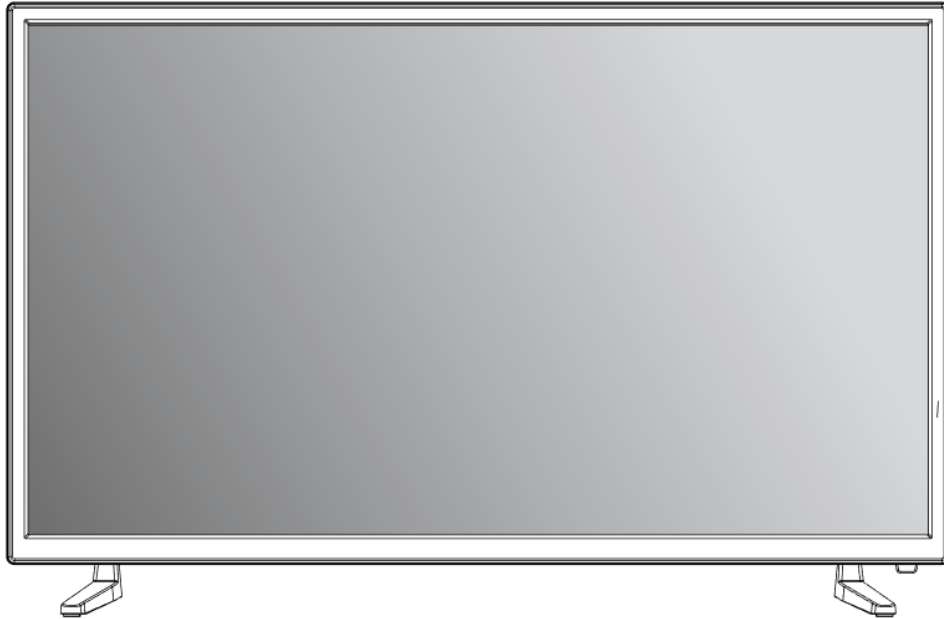

HD SMART LED TV

eiQ-32HDT2SM

LED TV

CONTENTS

SAFETY INFORMATION	3
CONNECTION AND PREPARATION OF TV	6
WHAT IS INCLUDED	6
INSTALLATION OF LEGS	6
WALL MOUNTING	7
BUTTON FUNCTIONS	8
INPUT / OUTPUT TERMINALS	9
CONNECTING TO EXTERNAL DEVICES	10
REMOTE CONTROL	11
INSTALLATION OF BATTERIES	12
INITIAL SETUP	12
BASIC OPERATION	14
SETTING OF STANDBY MODE	14
MAIN MENU	14
HOME	14
APP	15
MEDIA	15
VIDEO	16
MUSIC	17
PHOTO	17
SETTING THE INPUT SOURCE	18
SETTINGS MENU	18
PICTURE SETUP	18
SOUND SETUP	20
CHANNEL SETUP	21
SYSTEM LOCK	22
TIME SETTINGS	23
COMMON SETTINGS	23
TECHNICAL SPECIFICATION	24
SUPPORTED SIGNAL MODES	25
SIMPLE TROUBLESHOOTING	26
MANUFACTURER SUPPORT	27

SAFETY INFORMATION

- Read these instructions – All the safety and operating instructions should be read before this product is operated.
- Keep these instructions – The safety and operating instructions should be retained for future reference.
- Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
- Follow all instructions – All operating and usage instructions should be followed.
- Do not use this equipment near water – The appliance should not be used near water or moisture e.g. in a wet basement or near a swimming pool.
- Clean only with a dry cloth. Do not use solvents or petroleum based fluids.
- Do not block any ventilation openings.
- Do not install near any heat sources such as radiators, stoves or other apparatus (including amplifiers) that produce heat.
- Do not tamper with the supplied plug. This plug is a BS1363 standard plug.
- Protect the power cord from being walked on or pinched, particularly at the plug and at the point where they exit from the appliance.
- Only use attachments/accessories specified by the manufacturer.
- Unplug the apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus or it has been exposed to rain or moisture, it does not operate normally or has been dropped.
- Please keep the unit in a well ventilated environment.
- The TV should only be connected to a mains power supply with AC 100-240V~ 50/60Hz
- To prevent overload, do not share the same power supply socket with too many other electronic components.
- Do not place any connecting wires where they may be stepped on or tripped over.
- Do not place heavy items on the cable as this may cause damage.
- Hold the main plug, not the wires, when removing from a socket.
- Unplug immediately and seek professional help if the plug or cable is damaged, liquid has spilled onto the set, if accidentally exposed to water or moisture, if anything accidentally penetrates the ventilation slots or if the set does not work normally.
- Do not remove the safety covers. There are no user serviceable parts inside.
- To avoid battery leakage, remove exhausted batteries from the remote control when not in use for a long period.
- Do not block ventilation slots on the back cover. The TV can be placed in a

cabinet but ensure the guidance on clearances are followed.

- Do not tap or shake the TV screen, this may damage internal components.
- Diagrams within the manual are for illustrative purposes only, and as such there may be differences to the actual product received.



At full volume, prolonged listening may damage the users hearing.

WARNING

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Use cabinets or stands recommended by the manufacturer of the television.
- Only use furniture that can safely support the television set.
- Ensure the television is not overhanging the edge of the supporting furniture.
- Do not place the television on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television to a suitable support.
- Do not place the television set on cloth or other materials that may be located between the television set and the supporting furniture.
- Educate children about the dangers of climbing on furniture to reach the television or its controls.

If your existing television set is being retained and relocated, the same considerations as above should be applied.

WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and objects filled with liquids, such as vases, shall not be placed on or next to the apparatus.

WARNING

The wall plug socket is used as a disconnection device and should remain readily accessible.

CAUTION

Danger of explosion if the battery is incorrectly replaced.

Replace only with the same or equivalent type.

Batteries shall not be exposed to excessive heat such as direct sunlight, fire or the like. Used batteries should be recycled appropriately.

 
 
 
CAUTION

To reduce the risk of electric shock, DO NOT remove the cover (or back).

No user serviceable parts inside. Refer servicing to qualified service personnel.



ATTENTION

- Place the TV on a firm and flat surface, leaving a space of at least 10cm around the set and 30cm from the top of the set to the ceiling or cabinet. Ensure the TV is positioned close to the wall to avoid it falling when pushed.

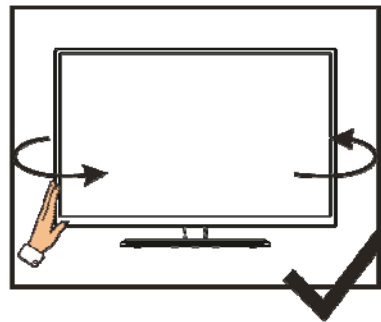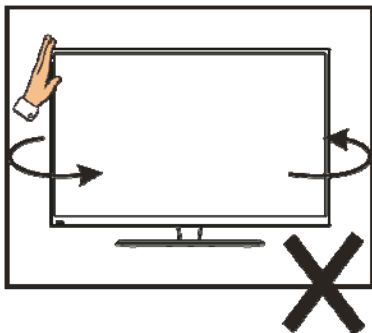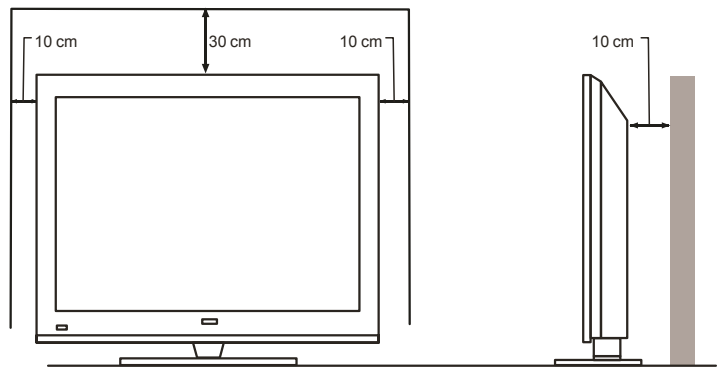

- When twisting the TV set, do not hold the top of the TV, you should twist from the base.

  - When lifting the TV, do not use one hand to handle it, you should lift the TV using two hands, ensuring pressure is not put on the screen itself.

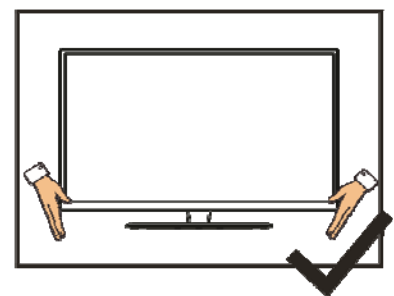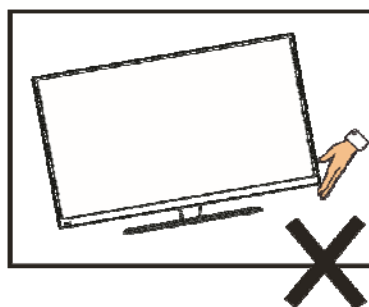

CONNECTION AND PREPARATION OF THE TV

WHAT IS INCLUDED



TV Set



 
Remote Control
(2 x AAA Batteries)



User Manual






4 Bolts



2 Legs

INSTALLATION OF LEGS

   - 1 Place the TV with the front facing downwards on a soft cloth pads on a desk.
- 2 Insert the legs into the sockets on the base of the TV.
- 3 Insert the screws into the sockets and tighten them with a screwdriver. Do not use an electric screwdriver, or similar.

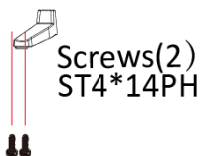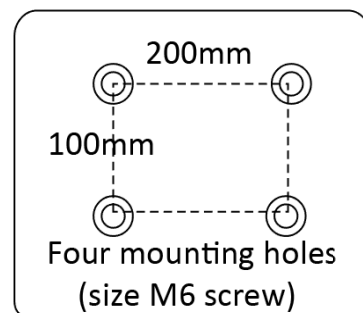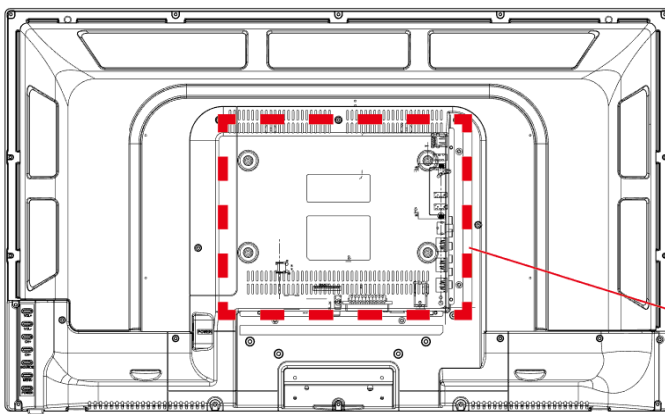


WALL MOUNTING

- The TV is provided with mounting holes for a VESA approved wall mounting bracket (not supplied).
- The VESA mounting pattern is :
200x100mm and the size of the bolts is 4 x M6 x 12(not supplied).
- Do not use bolts longer than the size specified above for your model or damage will occur to the internal components.



NOTES:

- Do not install this product until this manual has been read and understood thoroughly. Please keep these instructions for future reference.
- Due to the heavy weight and dimensions of the LCD screens and their fragile nature, we recommend that they are unpacked and assembled by 2 people and professional installers are used to wall mount them (Wall mounting is optional). If you do not understand the instructions, or are unsure how to install this product, please contact a professional for assembly advice and assistance.
- Careful consideration should be made regarding the location the television is to be wall mounted as some walls are not suitable for installation. If the television is to be mounted on drywall, the mount must be anchored into a wooden stud, concrete block or brick behind the drywall. Installing on drywall alone will not support the weight of the display.
- When drilling holes it is particularly important to take care of electrical cables, water or gas pipes in the wall. Please follow the instructions provided by the wall bracket manufacturer and ensure that all fixing screws supplied are used.
- electriQ and its distributors and dealers are not liable or responsible for damage or injury caused by improper installation, improper use or failure to observe these safety instructions. In such cases any guarantee will expire.

 
BUTTON FUNCTIONS

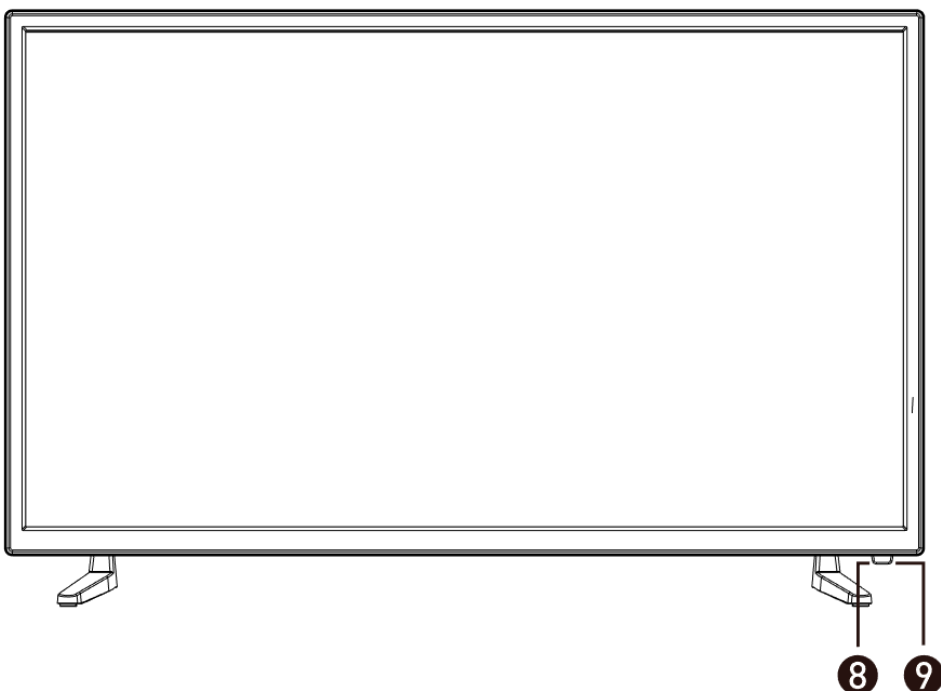

  1. **POWER BUTON:** To turn the TV ON/OFF
2. **SOURCE** Button: Repeatedly press to select the input source.
3. **MENU** Button: To enter menu to change settings on the TV.
4. **CH-:** To select previous channel
5. **CH+:** To select next channel
6. **VOL-:** To decrease the volume level.
7. **VOL+:** To increase the volume level
8. **REMOTE CONTROL SENSOR**
9. **POWER INDICATOR:** In standby mode the indicator light will display red, when switched on the indicator light will display green

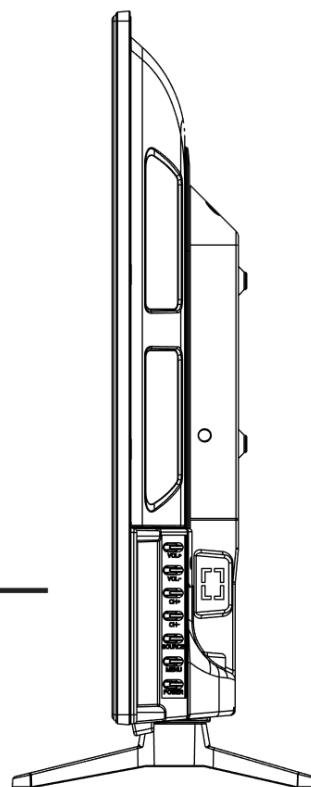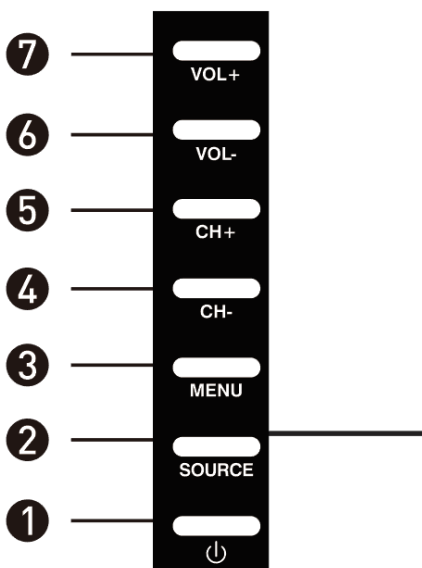


INPUT / OUTPUT TERMINALS

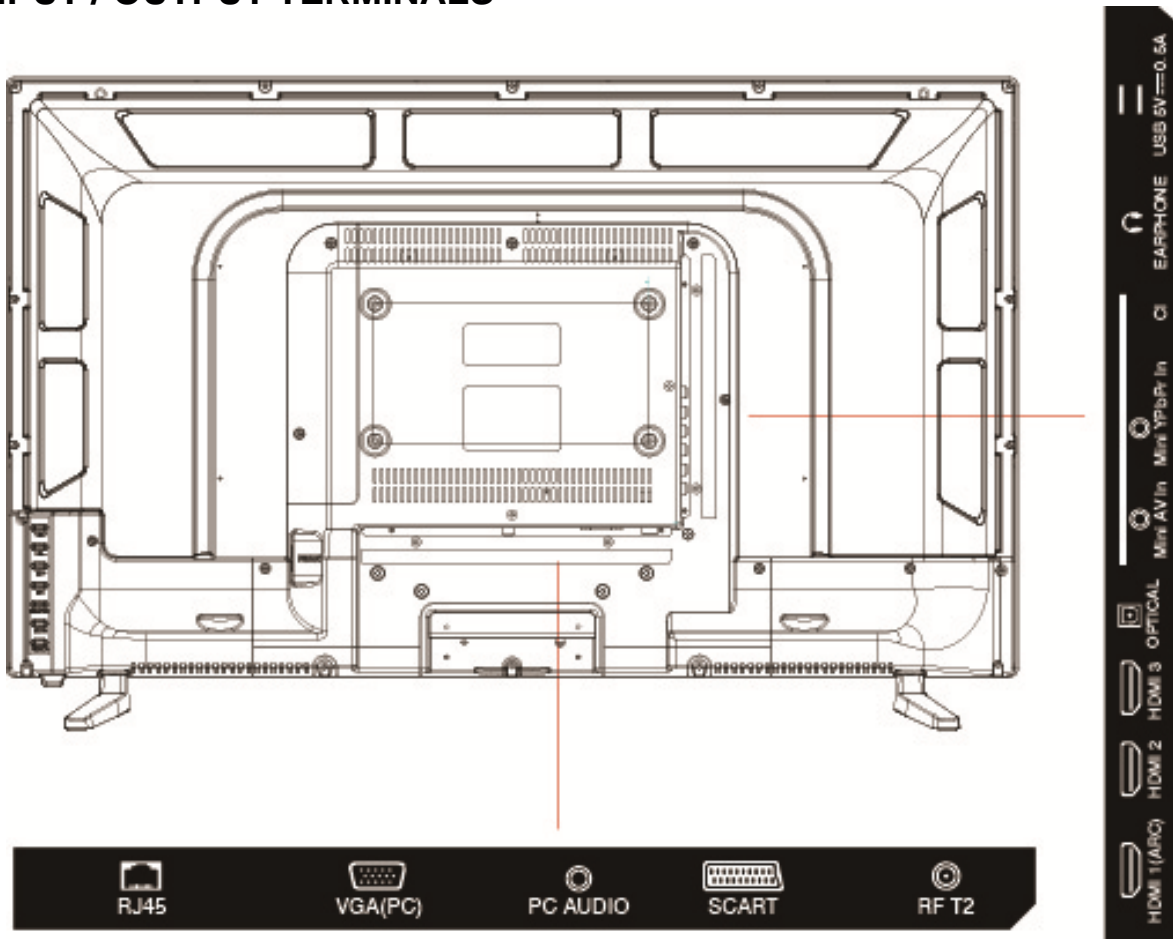 



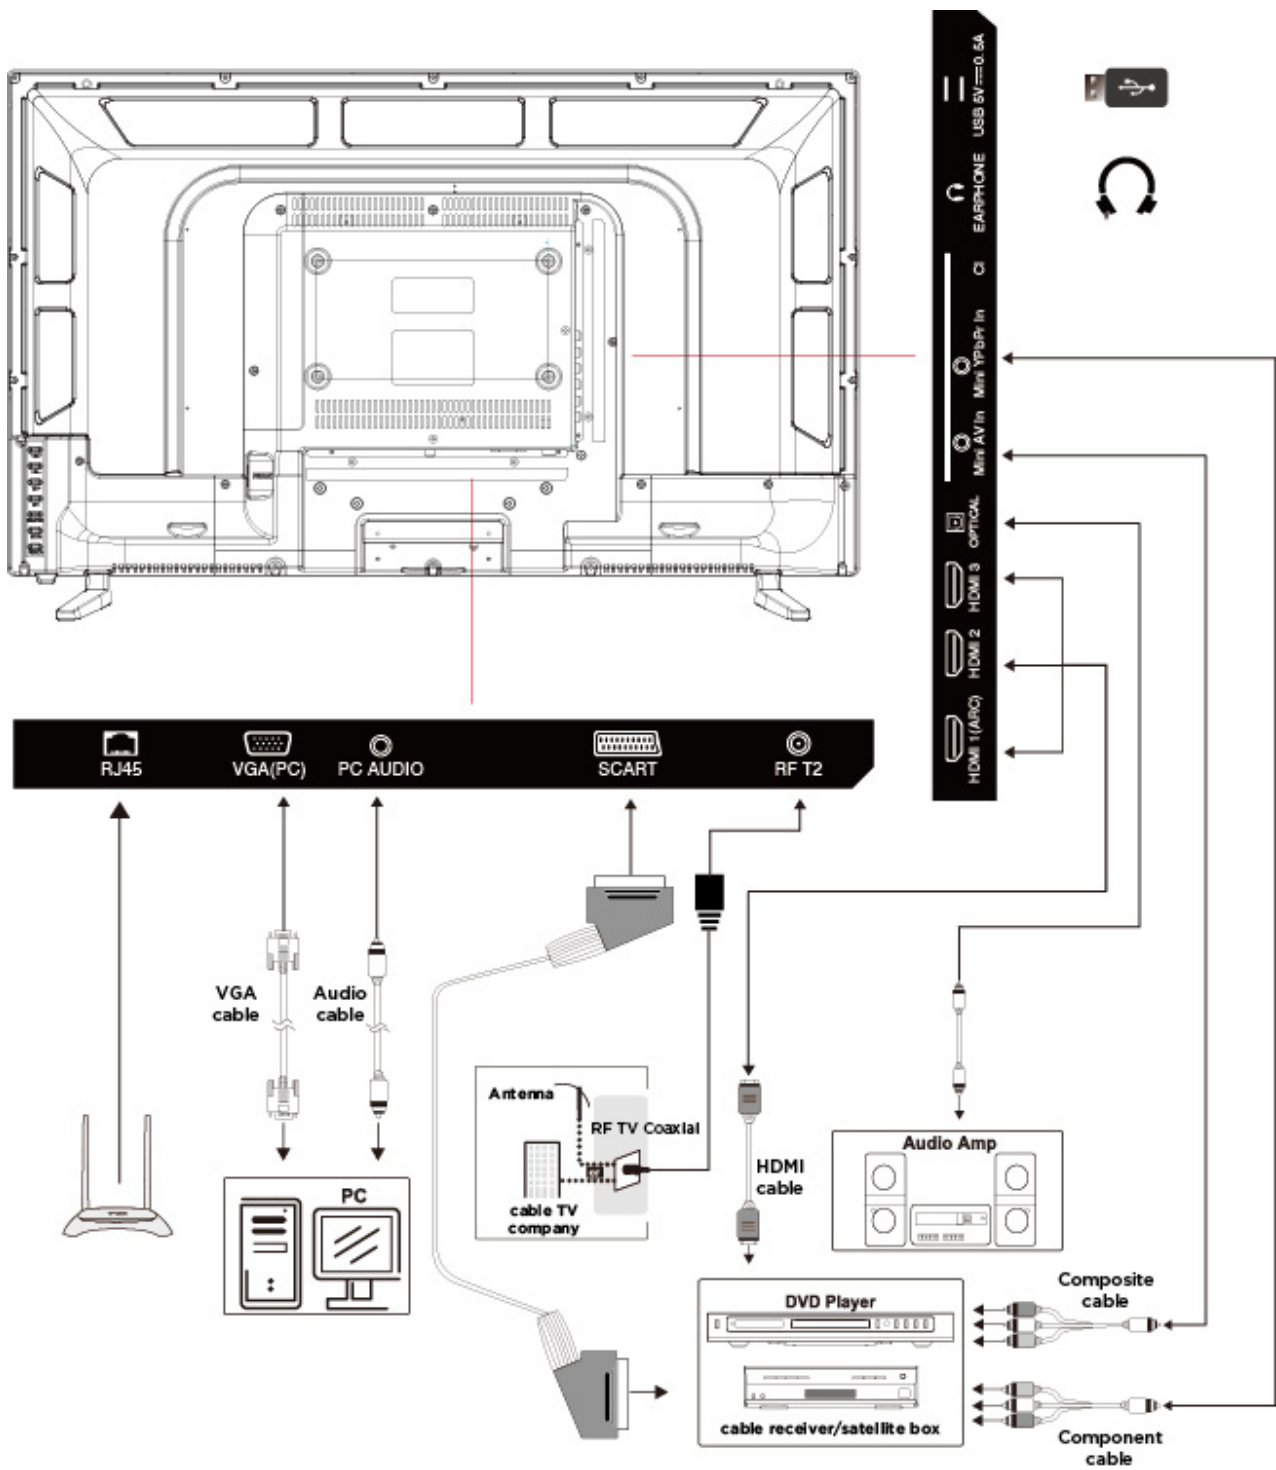 


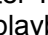

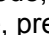





1. **RJ45:** Network port
2. **VGA:** PC Video input.
3. **PC Audio:** PC Audio input.
4. **SCARTSocket:** For connecting older equipment using a SCART lead.
5. **RF:** Antenna connection.
6. **HDMIx3:** For connecting DVD players, set top boxes, games consoles, etc.
7. **Coaxial:**Digital audio output, for use with compatible sound bars / audio equipment.
8. **Mini AV Input:** External AV signal input and relevant right/left sound channel input.
9. **Mini YPbPr Input:** Connect to the YPbPr video output terminal of the DVD player
10. **CI Port:** Connect a common interface module
11. **Headphone Socket:** Connect headphones, or can be used for compatible Soundbars / audio equipment.
12. **USB x2:** Provides access to SMART TV. Connect smart remotes, keyboards, gaming accessories or usb flash drive for DTV recording, timeshift or media playback.
 Note: Only connect low power USB flash drives or externally powered harddrives to the USB ports as they only provide 0.5 Amps power.

CONNECTING TO EXTERNAL DEVICES



 
REMOTE CONTROL

1. **POWER:** Turn the TV On/Off.
2. **MUTE:** Mute or restore the sound.
3. **NUMBER BUTTONS:** Change the channel.
4. **FAV:** Show the list of favourite channels.
5. **MOUSE:** Turns on / off the mouse emulation.
Use the arrows to navigate and OK to select. To return to keys navigation press mouse key again.
RETURN : Return to previous channel.
6. **AUDIO:** Switch the audio channel during DVD or multimedia playback. **III:** In the TV mode, press to change between stereo and mono output.
7. **S. MODE:** Change between audio options.
8. **P. MODE:** Output image mode selection.
9. **SLEEP:** Auto Power Off Timer.
10. **VOL+ / VOL-:** Increase / decrease the volume.
11. **CH+ / CH-:** Next / previous channel
12. **SOURCE:** Press to change between the input sources
13. **INFO:** Show information about the current program
14. **ASPECT:** Press it repeatedly to select desired screen size.
15. **FREEZE:** To freeze the picture.
16. **HOME** : Returns to the main smart tv menu.
17. **SETTINGS** : Provides quick access to the smart TV functions.
18. **NAVIGATION BUTTONS:** (Up, Down, Left, Right and OK): To move in the menus and confirm settings.
19. **MENU:** Enter the TV Menu
20. **EXIT:** Exit the Menu
21. **SIZE:** Switch Teletext size.
REWIND : Rewind playback
22. **HOLD:** Freeze a multi-page selection within TELETEXT mode.
SKIP : Next file or chapter
23. **TEXT:** Turn on and off the Teletext function.
SKIP BACK : Previous file or chapter
24. **REVEAL:** Reveals hidden information such as the answers to a quiz in TELETEXT Mode.
FAST FORWARD : Fast Forward Playback
25. **GUIDE:** Show the Electronic Program Guide (EPG).
26. **SUBPAGE:** Enter Teletext sub-page.
STOP  Stop playback
27. **INDEX:** Displays the main index in TELETEXT mode.
PLAY/PAUSE : Pause or restart playback.
28. **SUBTITLE:** Select subtitle of media video file (requires the support of disk or file)
29. **TV/RADIO:** In DTV mode, press TV/RADIO button to enter TV or RADIO mode.
30. **R. LIST:** IN DTV mode, displays the executed PVR LIST.
31. **REC:** In DTV mode, press the REC button to start recording, press the  button to stop recording.
32. **TIME SHIFT:** In DTV mode, press the TIME SHIFT button to start the delay function, press the  button to start playing delay program, press the  button to stop the delay function.
33. **COLOUR BUTTONS** : Press the appropriate colour to direct access functions in TELETEXT or EPG modes.



INSTALLATION OF BATTERIES

- 1 Remove the battery cover from the rear of the remote control.
- 2 Install two AAA 1.5V batteries.(Ensure the correct polarity of the batteries.)
- 3 Replace the battery cover.

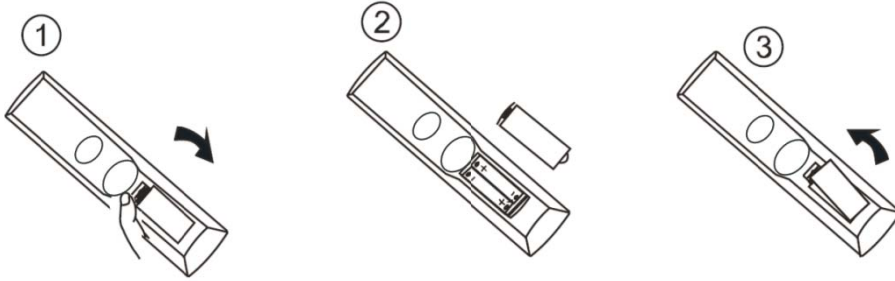


Please take out of the batteries from the remote when it is not going to be used for a long period of time.

If the remote control doesn't work properly, please carry out the following checks.

- Check the TV is turned on.
- Check the polarity of the batteries are correct.
- Check the batteries and replace if necessary
- Check the plug is fully inserted and the socket is switched on.
- Check there are no special fluorescent light or neon light which could interfere with remote signals.

 INITIAL SETUP

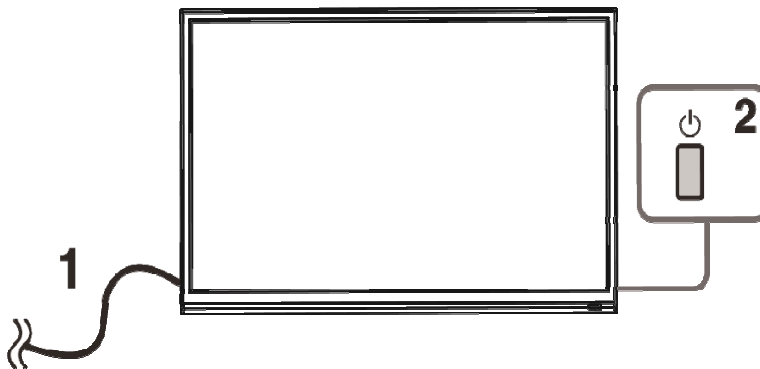

1. Connect your TV to the power outlet.
2. Connect your aerial and/or set top box to the television.
3. Press the POWER button on the remote to turn on the TV.
CAUTION: Always disconnect the TV from the power outlet when the TV will not be used for a long period of time. The POWER button on the television and remote is only used for switching the TV into standby and does not disconnect the device from the mains voltage. To completely disconnect the mains voltage, please remove the plug from the socket.
4. Use the ▼/▲/◀/▶ buttons on the remote to follow the setup guide on screen

5. Press the OK button to initiate the setup.



6. Use the ▼ and ▲ buttons to select the language. Press the OK button to select the highlighted language before pressing the ► button to move to the next screen.

7. Use the ▼ and ▲ buttons to select the country. Press OK button to select the highlighted country before pressing the ► button to move to the next screen.



 
8. Use the ▼ and ▲ buttons to select the time zone before pressing the ► button to move to the next screen.



9. Press the OK button to connect the WIFI/ wired network. If connecting to a wireless network, select your router, and enter the router password. Press the ► button to move to the next screen.



10. The setup is now complete. Use the ▼ and ▲ buttons to select the input source.

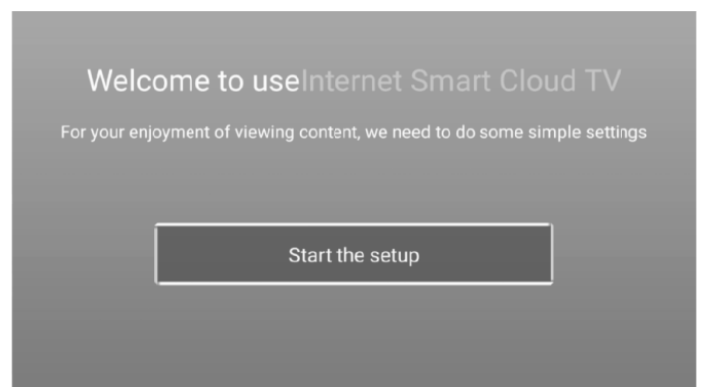


BASIC OPERATION

STANDBY MODE

- Press the STANDBY button to turn on the television.
- Press the STANDBY button again to return the television to standby mode. The power indicator will turn red.
- Be sure not to set your TV in standby mode for a long period of time.


MAIN MENU

 Press the MENU button to enter the main menu for the TV. This is split into 6 separate sections Use the ◀ and ▶ button to select the required section before using the ▼ or ▲ button to enter it.

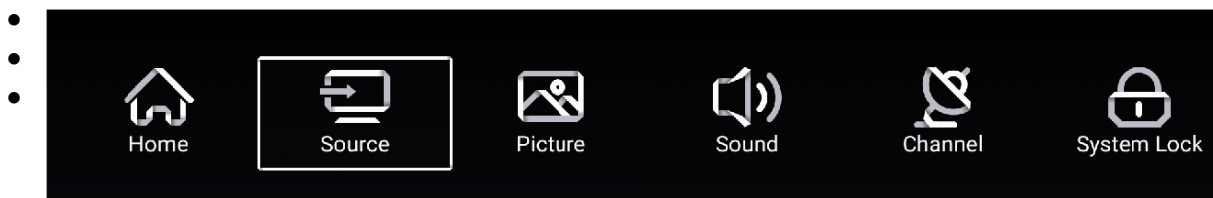


HOME

 The home section provides you with options to change the current input source, as well as giving access to the smart functions within the TV. Use the arrow buttons on the remote to navigate the screen, or alternatively press the MOUSE button on the remote to activate the mouse cursor.

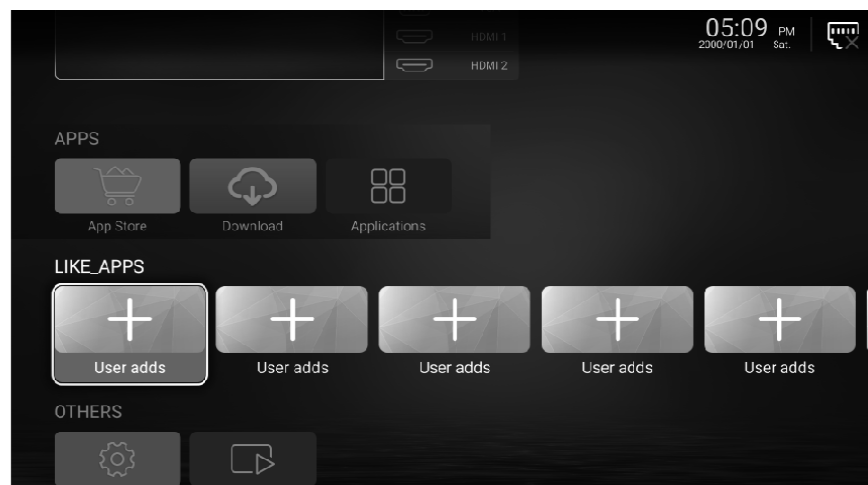

APPS

 Provides links to the App Store to download apps to your SMART TV. The applications button can also be selected to view all currently installed Apps

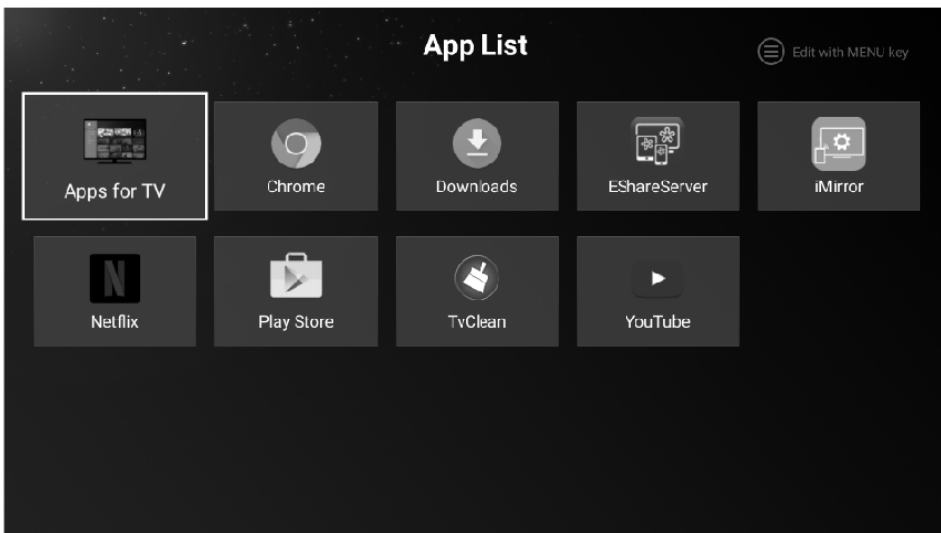

APPLICATIONS / APP List

 
Within the App List, select the APP to open and press the OK button to launch the application.

LIKE_APPS

This provides quick links to your most commonly used APPS. To add an app to your LIKE_APPS list, select a User Adds button, and then select the App to add from the list of installed apps provided.

SETTINGS

This provides access to the settings for the SMART component of the TV, providing options to update your WIFI connection

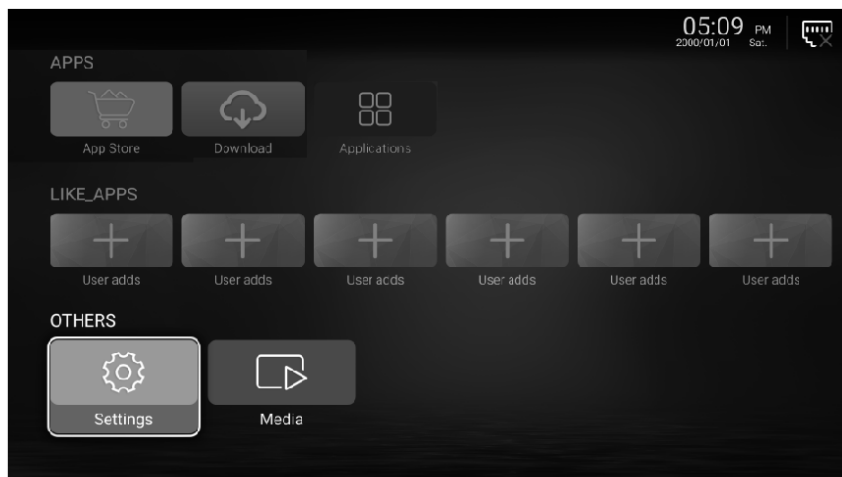


MEDIA


Media allows the playback of videos and music, and the viewing of pictures saved on the TV or memory stick.

VIDEO

Use the ◀ and ▶ buttons to select the video to play.





 Press to play previous video.

 Press to play fast backward.


 Press to stop/play the video.

 Press to play fast forward.

 Press to play the next video.

 Press to view the information for the video (Resolution/Size/Duration/Bitrate)

 Press to set the Audio Track/Select Subtitle/Region Language/Play Mode/Aspect Ratio.

 Press to select the video to play.

MUSIC

Use the ◀ and ▶ buttons to select the video to play.



Press to play fast backward.



Press to stop/play the music.



Press to play fast forward.



 
Press to view the information for the music.(Mine Type/Size/Bittrate)



Press to set the Play Mode(Repeat All/Repeat One/Random/None).



Press to select the music to play.

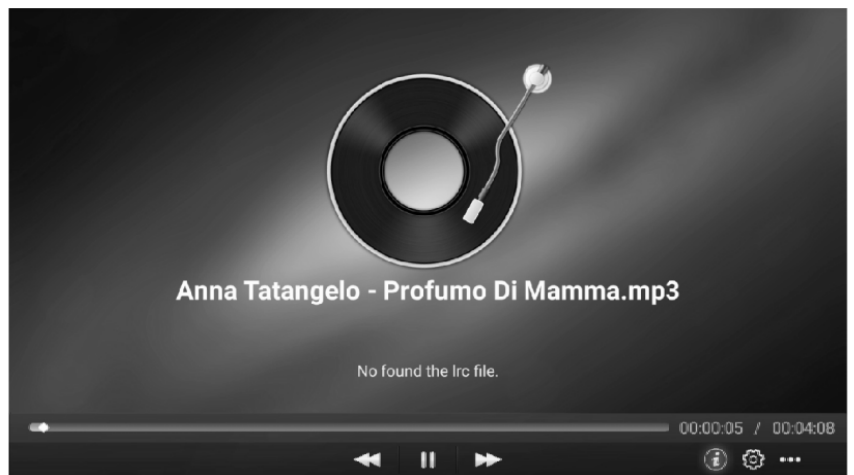

PHOTO

Press ◀ / ▶ to select photo.



Press to rotatethe picture anticlockwise .



Press to stop/play the slideshow..



Press to rotate the picture clockwise.



Press to view the information for the picture.(Size/Resolution)



Press to set the Play Mode(Aspect Ratio/Playback duration).



Press to select the photo to display.



 


SELECT THE INPUT SOURCE

THROUGH THE MAIN MENU

Select source to show the input source and use the ▲ and ▼ buttons to select the input.

Press the ENTER button on the remote to confirm

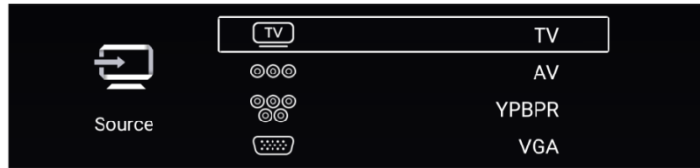

list

USING THE REMOTE:

Press the SOURCE button to display the input source list.

 
Use the ▲ and ▼ buttons to select the input.

Press the ENTER button on the remote to confirm



USING THE TV CONTROLS:

Press the SOURCE button repeatedly scroll through the input source list

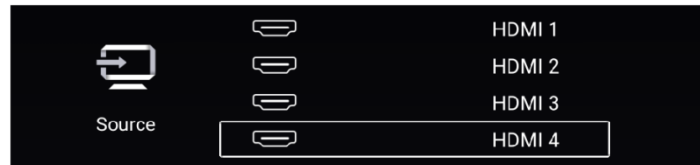

to

 


PICTURE

The Picture section provides you with the options to change the picture settings, allowing you to modify the display based on its location and your personal preferences.

Navigate the picture section using the ▼ and ▲ buttons, and select or modify the selected line using the ◀ and ▶ buttons: Within this section you can make changes to the: Picture Mode/Contrast/Brightness/Colour/Sharpness/Backlight/Noise Reduction/Colour Temp/More Settings



PICTURE MODE

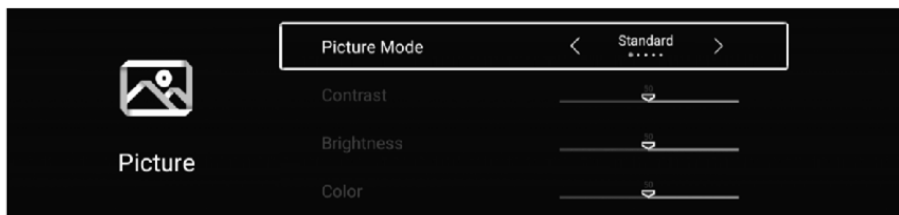

Can be changed between Standard,Movie,Vivid,Energy Saving, User.

Standard	The default mode, to make users experience high-quality images under normal light.
Movie	This mode is more suitable for watching movies.
Vivid	Image colours more beautiful, more vivid picture.
Energy Saving	Reduce screen brightness, improved contrast for energy saving.
User	User-defined picture settings.

  CONTRAST/BRIGHTNESS/COLOUR/SHARPNESS/BACKLIGHT

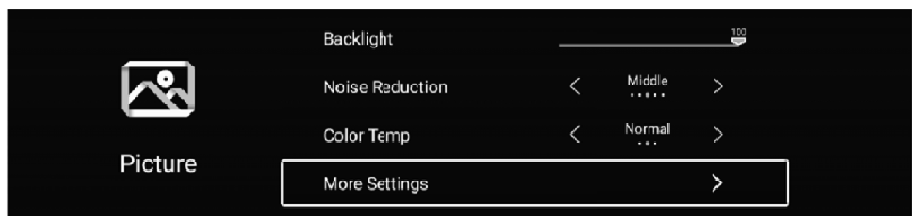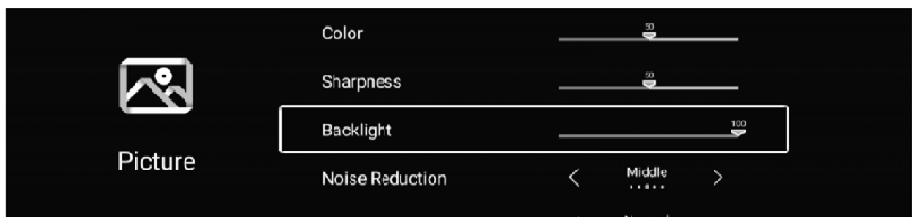

Contrast	Adjust image contrast.
Brightness	Adjust image brightness.
Color	Adjust image colour density.
Sharpness	Adjust the image edge sharpness.
Backlight	Adjust the screen backlight brightness

NOISE REDUCTION

Used to eliminate image noise intensity between the option of: Off,Low,Medium,High,Auto

COLOR TEMP

Adjust the overall color of the image between the following options

Cool	Produces a gentle blue-hued image.
Normal	Produces a vivid image.
Warm	Produces a red-hued image.

MORE SETTINGS

More settings contains the option to adjust the DLC settings.



DLC (Dynamic light control)

 
Can be changed between the options of select Dark/Normal/Bright/Off.

SOUND

The Sound section provides you with the options to change the sound settings, allowing you to modify the output based on your personal preferences.

Navigate the picture section using the ▼ and ▲ buttons, and select or modify the selected line using the ◀ and ▶ buttons: Within this section you can make changes to the: SoundMode/Bass/Treble/Balance/AVC/More settings.

SOUND MODE

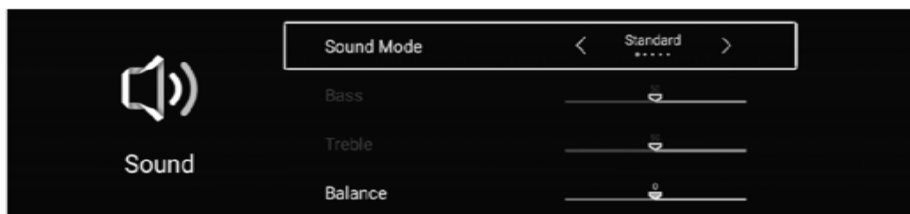


Can be changed between: Standard, Music, Theatre, News and User.

Standard	Produces a balanced sound in all environments.	
Music	Preserves the original sound. Good for musical programs.	
Theatre	Enhances treble and bass for a rich sound experience.	
News	Enhanced voice.	
User	Select to customize picture settings.	
	Bass	Adjust the bass.
	Treble	Adjust the treble.
	Balance	Adjust the left and right channel output balance.

AVC

After turning on the AVC, the TV will reduce the impact of difference in the transmission volume of broadcasts, helping to ensure the volume is stable when changing channels.

 MORE SETTINGS

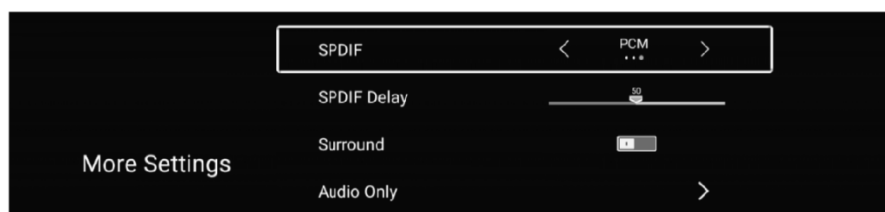

SPDIF

Chose between the option of OFF/RAW/PCM.

SPDIF DELAY

 
Used to adjust the delay time on the SPDIF output.

 
 
SURROUND

Use to turn the Surround option On and Off.

AUDIO ONLY

This option will turn off the screen output and only play the sound from the input selected..

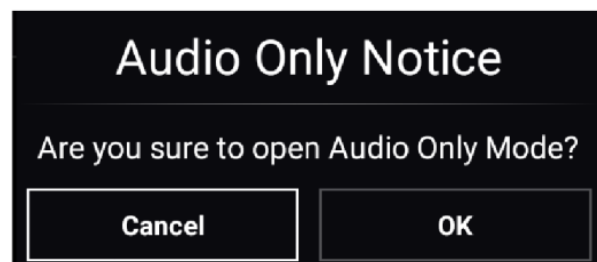

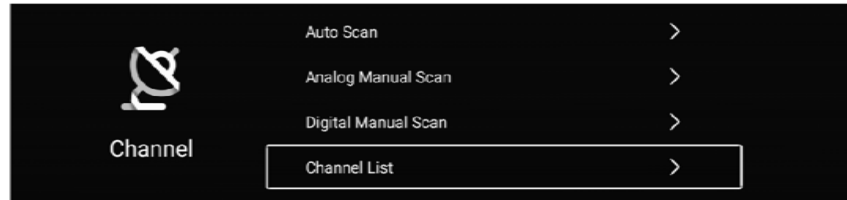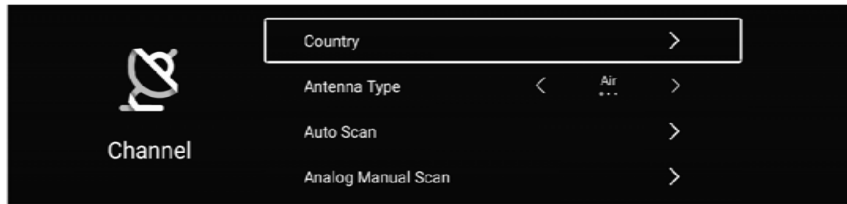

COUNTRY

 
 
Allows the country to be changed from the country selected during the initial setup.

ANTENNA TYPE-AIR

Select the Type of input on the RF connection between a standard aerial and cable.

AUTO SCAN

Use to automatically scan for channels

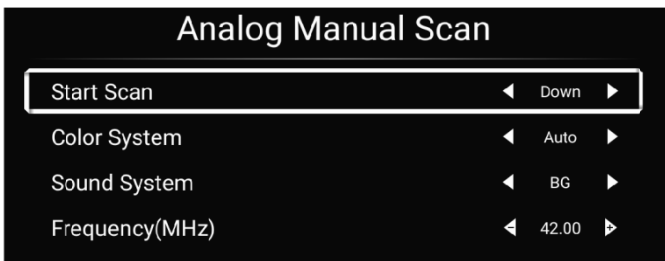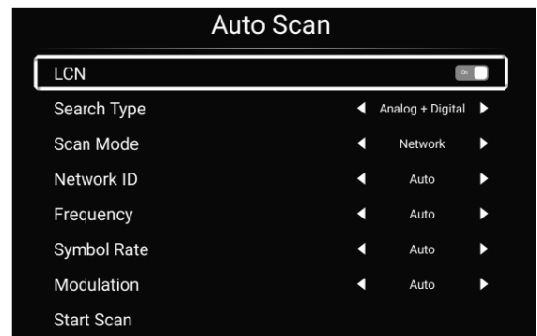


ANALOG MANUAL SCAN

The TV will scan for Analogue channels that are broadcast


DIGITAL MANUAL SCAN

 The TV will scan for Digital channels that are broadcast

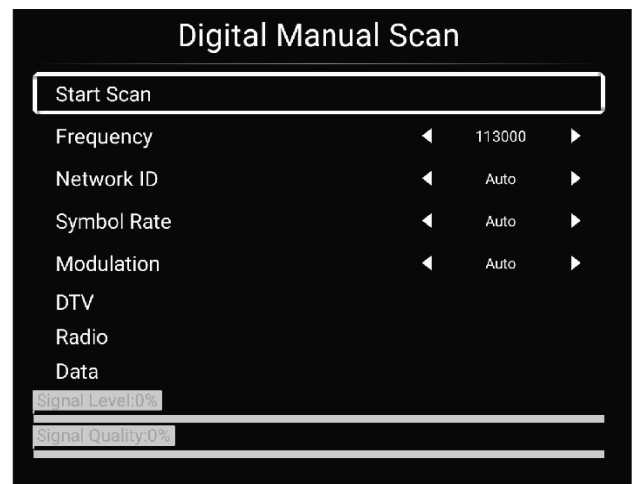


CHANNEL LIST

 Press the MENU button edit the channel(Skip /Delete /Fav).

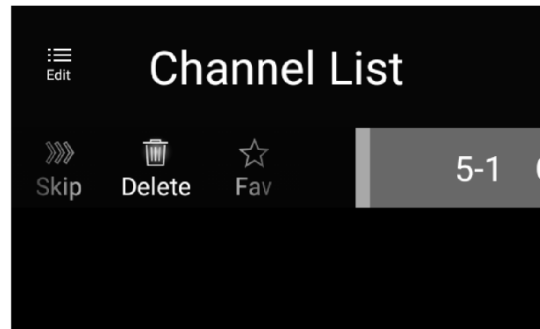


EPG (Electronic Program Guide)

 The electronic program guide allows you to browse the channels, and view the current and upcoming programs.

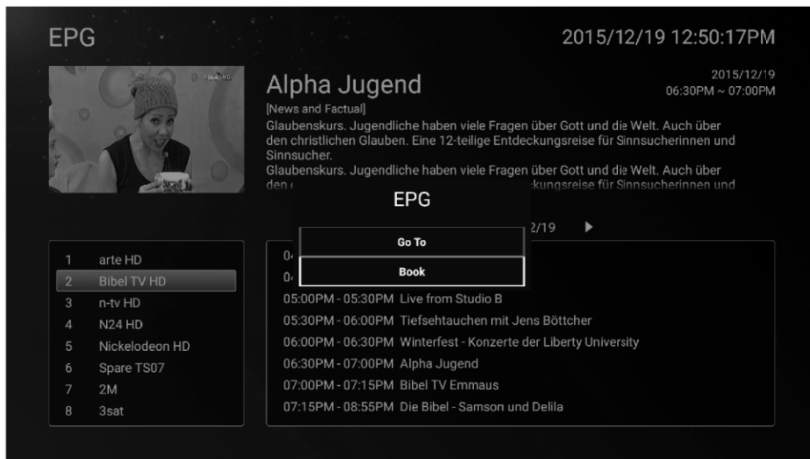



SYSTEM LOCK

 The system lock allows you to set both a system lock and a keypad lock for the remote. It also create a password to administer it.

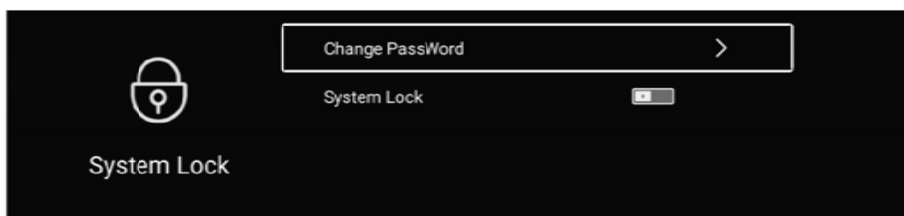

CHANGE PASSWORD

  Enter the old password (If set) and the new password twice to set up a password of the system lock.

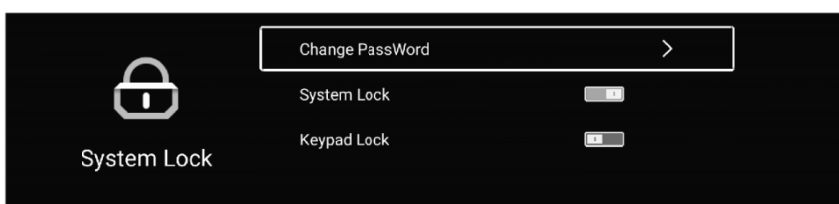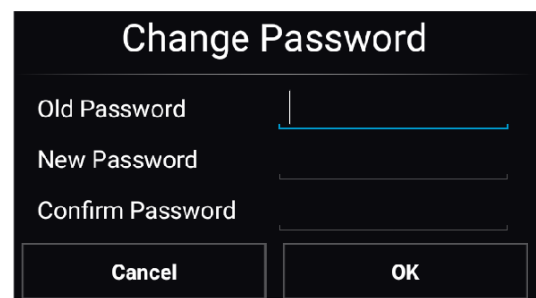

SYSTEM LOCK

Allows the system lock to be turned On/Off

KEYPAD LOCK

Allows the keypad lock to be turned On/Off

 
(NOTE: This function is only available when the System Lock is on).



TIME SETTING

The TimeSetting section provides you with the options to change the Time settings.

Navigate the Time Setting section using the ▼ and ▲ buttons, and select or modify the selected line using the ◀ and ▶ buttons: Within this section you can make changes to the: OSD Timer/Sleep Timer/Autostandby Timer

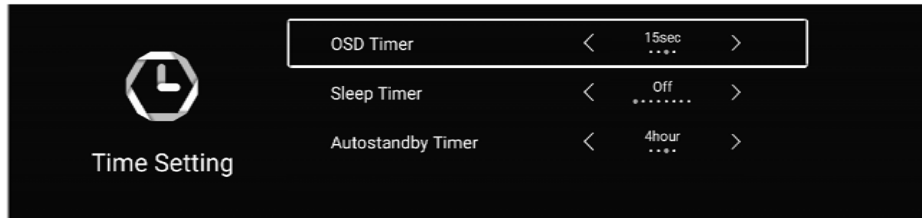

OSD TIMER

Can be changed between: off,5sec,15sec,30sec.

SLEEP TIMER

Can be changed between: off,15min,30min,45min,60min,90min,120min,240min.

AUTOSTANDBY TIMER

Can be changed between: off,3hour,4hour,5hour.



COMMON

Navigate the Common section using the ▼ and ▲ buttons, and select or modify the selected line using the ◀ and ▶ buttons: Within this section you can make changes to the: Blue Screen/HDMI CEC/Menu Reset

PVR SETTING

Use to select the recording location for the PVR.

BLUE SCREEN

 
 
Used to turn blue screen On and Off when the current channel is not receiving a broadcast.

HDMI CEC

Turn the HDMI control On and Off.

MENU RESET

Use this option to return all the settings within the TV menu back to the factory default.

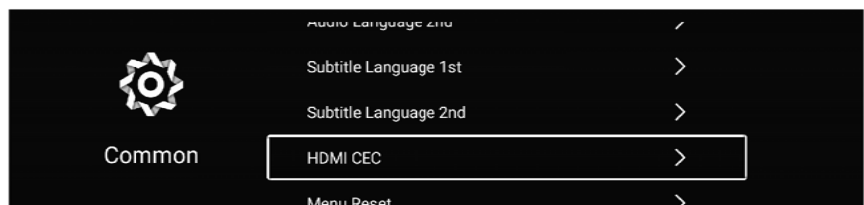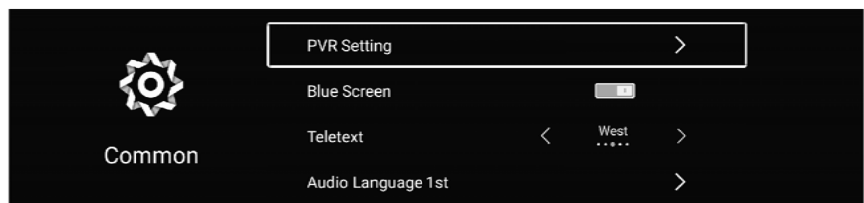

TECHNICAL SPECIFICATION

Product Model		eiQ-32HDT2SM
Screen Size		32" Diagonal
Aspect Ratio		16:9
Power Supply		AC 100-240V, 50/60Hz
Power Consumption		60W
TV System		PAL DVB-T2/-T/-C (There is no DVB-C signal in some Countries or Areas.)
Audio Output Power (Internal)		2 x 8W
Picture	Maximum Resolution	1366x768
	Brightness	180 cd/m ²
	Static Contrast	4000:1
	Response time	8ms
Input Terminal	Antenna Input	X1
	USB Input	X2
	HDMI Input	X3
	VGA Input	X1
	PC AUDIO Input	X1
	Audio Input (L/R)	X1 (Mini AV)
	Video Input	X1 (Mini AV)
	YPbPr Input	X1 (Mini)
	RJ45 Input	X1
	CI card In	X1
	SCART In/Output	X1
	DC In (12V)	NO
	CARD SLOT	NO
Output Terminal	Earphone	X1
	Audio Line Out(L/R)	NO
	Video Output	NO
	Optical	X1 (Digital)
	Coaxial out	NO
Working Temperature		0°C ~40°C
Working Humidity		20% ~ 80% Non-condensing

Note: Due to continued product development the specification shown above may change without notice.

SUPPORTED SIGNAL MODES

YPbPr MODE

Resolution	Horizontal Frequency (Khz)	Vertical Frequency (Hz)
480i	15.734	59.94
480p(720x480)	31.468	59.94
576i	15.625	50.00
576p(720x576)	31.25	50.00
720p(1280x720)	37.50	50.00
	45.00	60.00
1080i	28.13	50.00
	33.75	60.00
1080P(1920x1080)	67.50	60.00
	56.25	50.00

HDMI MODE

Resolution	Horizontal Frequency (Khz)	Vertical Frequency (Hz)
480p	31.468	59.94
576p	31.25	50.00
720p	45.00	60.00

- When the signal received by the display is not within the allowed range, a warning message will appear on the screen.
- You can confirm the input signal format onscreen.

VGA MODE

Resolution	Horizontal Frequency (Khz)	Vertical Frequency (Hz)	Memo
640 x 480	31.50	60.00	
800 x 600	35.16	56.25	
	37.90	60.00	
1024 x 768	48.40	60.00	
1366x 768	47.85	60.00	

Note: It is advised to use the VGA cable with a maximum length of 5 meters to maintain picture quality.

SIMPLE TROUBLESHOOTING

If the display fails or the performance changes dramatically, check the display in accordance with the following instructions. Remember to check the peripherals to pinpoint the source of the failure.

Symptom	Solution
Power cannot be turned on.(Power indicator does not illuminate.)	-Check that both ends of the power cable are plugged into the socket appropriately and the wall socket is operational
No Input Signal message appears.	-Check that the aerial cable is connected properly. -Check that the power of the relevant peripherals is turned on. -Check that the selected source matches the input.
The remote control does not function properly.	-Check the batteries are not drained.(Use new batteries.) -Check that the remote control is within the operating range. -Check that the remote control is pointed to the remote control window on the display. -Check that there are no obstacles between the remote control and the remote control window.
Flashing spots or stripes appear on the screen.	-Check that there are no emission (Car, HV cable or Neon lamp) or other possible interference sources.
Image colour or quality deteriorates.	-Check that all the video settings are adjusted appropriately, such as brightness, contrast, colour etc. -For more information about video settings, refer to OSD Functions
Screen position and size are incorrect.	-Check that the screen position and size is adjusted appropriately.
Image or colour is incorrect.	-Check that the signal line is connected properly. -When connecting to a PC, you can change the resolution of the PC to acquire the correct image. The discrepancy of the PC output signal may affect the display of the image.
Display warning message.	-Check that the input signal line is properly fixed. -Select the correct input signal. -For more information, refer to Supported Signal Modes

PRODUCT DISPOSAL



Do not dispose this product as unsorted municipal waste. Collection of such waste must be handled separately as special treatment is necessary.

Recycling facilities are now available for all customers at which you can deposit your old electrical products. Customers will be able to take any old electrical equipment to participating civic amenity sites run by their local councils. Please remember that this equipment will be further handled during the recycling process, so please be considerate when depositing your equipment. Please contact the local council for details of your local household waste recycling centres.

electriQ UK SUPPORT

Complete online support form on www.electriQ.co.uk/support

Service Line: 0871 620 1057

Office hours: 9AM - 5PM Monday to Friday

Unit J6, Lowfields Business Park,
Lowfields Way, Elland
West Yorkshire, HX5 9DA