

# electric

## USER MANUAL



HD LED TV WITH DVD PLAYER  
**eiQ-32HDT2DVD**

# LED TV

# CONTENTS

SAFETY INFORMATION	3
CONNECTION AND PREPARATION OF TV	6
WHAT IS INCLUDED	6
INSTALLATION OF LEGS	6
WALL MOUNTING	7
BUTTONS AND INTERFACE	8
CONNECTING TO EXTERNAL DEVICES	10
REMOTE CONTROL	11
INSTALLATION OF BATTERIES	12
INITIAL SETUP	13
BASIC OPERATION	14
CHANNEL SET UP	14
TUNING	15
TV MENU	16
PICTURE SETUP	16
SOUND SETUP	18
TIME	19
LOCK	20
SET UP MENU	21
MEDIA	24
DVD SETTINGS	28
TECHNICAL SPECIFICATIONS	31
TROUBLESHOOTING	32
MANUFACTURER SUPPORT	33

## SAFETY INFORMATION

- Read these instructions – All the safety and operating instructions should be read before this product is operated.
- Keep these instructions – The safety and operating instructions should be retained for future reference.
- Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
- Follow all instructions – All operating and usage instructions should be followed.
- Do not use this equipment near water – The appliance should not be used near water or moisture e.g. in a wet basement or near a swimming pool.
- Clean only with a dry cloth. Do not use solvents or petroleum-based fluids.
- Do not block any ventilation openings.
- Do not install near any heat sources such as radiators, stoves or other apparatus (including amplifiers) that produce heat.
- Do not tamper with the supplied plug. This plug is a BS1363 standard plug.
- Protect the power cord from being walked on or pinched, particularly at the plug and at the point where they exit from the appliance.
- Only use attachments/accessories specified by the manufacturer.
- Unplug the apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus or it has been exposed to rain or moisture, it does not operate normally or has been dropped.
- Please keep the unit in a well-ventilated environment.
- The TV should only be connected to a mains power supply with AC 100-240V~ 50/60Hz
- To prevent overload, do not share the same power supply socket with too many other electronic components.
- Do not place any connecting wires where they may be stepped on or tripped over.
- Do not place heavy items on the cable as this may cause damage.
- Hold the main plug, not the wires, when removing from a socket.
- Unplug immediately and seek professional help if the plug or cable is damaged, liquid has spilt onto the set, if accidentally exposed to water or moisture, if anything accidentally penetrates the ventilation slots or if the set does not work normally.
- Do not remove the safety covers. There are no user serviceable parts inside.
- To avoid battery leakage, remove exhausted batteries from the remote control when not in use for a long period.
- Do not block ventilation slots on the back cover. The TV can be placed in a

cabinet but ensure the guidance on clearances are followed.

- Do not tap or shake the TV screen, this may damage internal components.
- Diagrams within the manual are for illustrative purposes only, and as such there may be differences to the actual product received.



At full volume, prolonged listening may damage the users hearing.

### **WARNING**

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Use cabinets or stands recommended by the manufacturer of the television.
- Only use furniture that can safely support the television set.
- Ensure the television is not overhanging the edge of the supporting furniture.
- Do not place the television on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television to a suitable support.
- Do not place the television set on cloth or other materials that may be located between the television set and the supporting furniture.
- Educate children about the dangers of climbing on furniture to reach the television or its controls.

If your existing television set is being retained and relocated, the same considerations as above should be applied.

### **WARNING**

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and objects filled with liquids, such as vases, shall not be placed on or next to the apparatus.

### **WARNING**

The wall plug socket is used as a disconnection device and should remain readily accessible.

### **CAUTION**




Danger of explosion if the battery is incorrectly replaced.  
Replace only with the same or equivalent type.  
Batteries shall not be exposed to excessive heat such as direct sunlight, fire or the like. Used batteries should be recycled appropriately.

### **CAUTION**

To reduce the risk of electric shock, DO NOT remove the cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.



## ATTENTION

- Place the TV on a firm and flat surface, leaving a space of at least 10cm around the set and 30cm from the top of the set to the ceiling or cabinet. Ensure the TV is positioned close to the wall to avoid it falling when pushed.

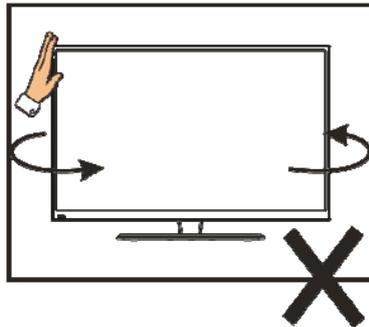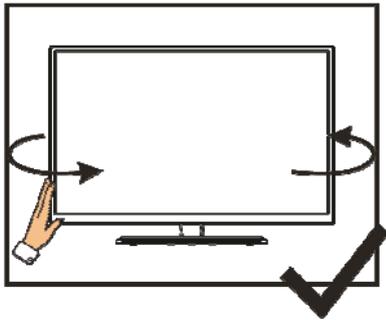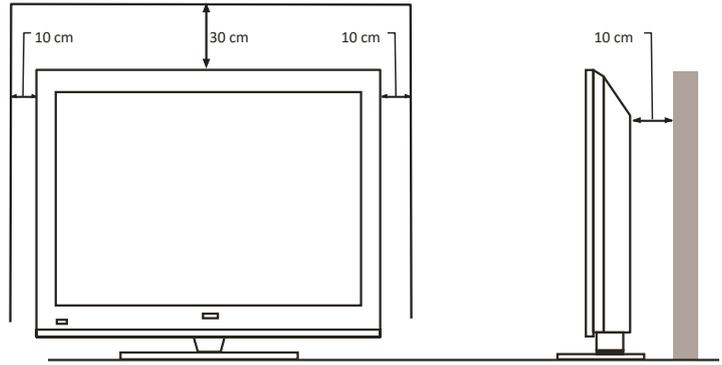

- When twisting the TV set, do not hold the top of the TV, you should twist from the base.

- When lifting the TV, do not use one hand to handle it, you should lift the TV using two hands, ensuring pressure is not put on the screen

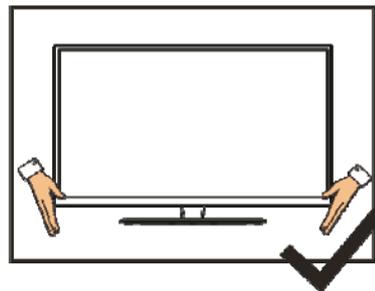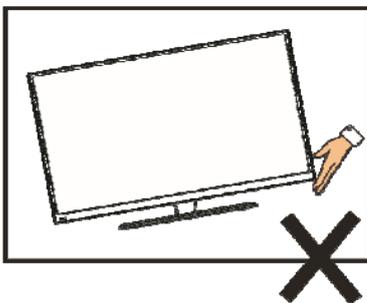

# CONNECTION AND PREPARATION OF THE TV

## WHAT IS INCLUDED



TV Set




Remote Control  
(2 x AAA Batteries)



User Manual





4 Bolts

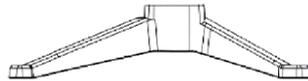


2 Legs

## INSTALLATION OF LEGS


- 1 Place the TV with the front facing downwards on a soft cloth pads on a desk.
- 2 Insert the legs into the sockets on the base of the TV.
- 3 Insert the screws into the sockets and tighten them with a screwdriver. Do not use an electric screwdriver, or similar.

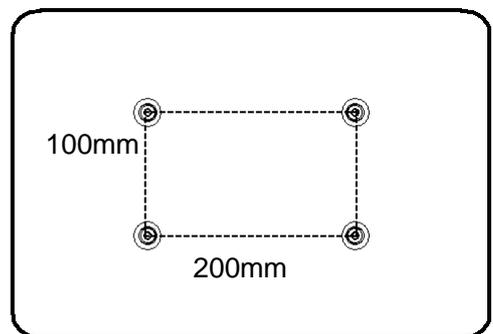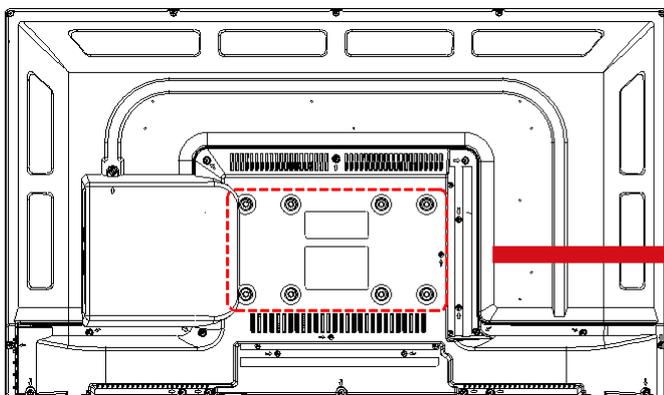

Four mounting holes  
M6 Screw

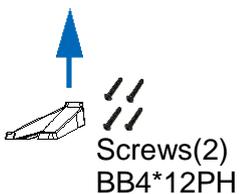

Screws(2)  
BB4\*12PH

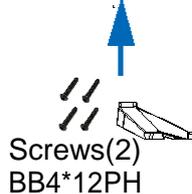

Screws(2)  
BB4\*12PH


## **WALL MOUNTING**

- The TV is provided with mounting holes for a VESA approved wall mounting bracket (not supplied).
- The VESA mounting pattern is:  
200x100mm and the size of the bolts is 4 x M6 x 10 (not supplied).
- Do not use bolts longer than the size specified above for your model or damage will occur to the internal components.

## **NOTES:**

- Do not install this product until this manual has been read and understood thoroughly. Please keep these instructions for future reference.
- Due to the heavy weight and dimensions of the LCD screens and their fragile nature, we recommend that they are unpacked and assembled by 2 people and professional installers are used to wall mount them (Wall mounting is optional). If you do not understand the instructions, or are unsure how to install this product, please contact a professional for assembly advice and assistance.
- Careful consideration should be made regarding the location the television is to be wall mounted as some walls are not suitable for installation. If the television is to be mounted on drywall, the mount must be anchored into a wooden stud, concrete block or brick behind the drywall. Installing on drywall alone will not support the weight of the display.
- When drilling holes, it is particularly important to take care of electrical cables, water or gas pipes in the wall. Please follow the instructions provided by the wall bracket manufacturer and ensure that all fixing screws supplied are used.
- electriQ and its distributors and dealers are not liable or responsible for damage or injury caused by improper installation, improper use or failure to observe these safety instructions. In such cases any guarantee will expire.


# BUTTONS

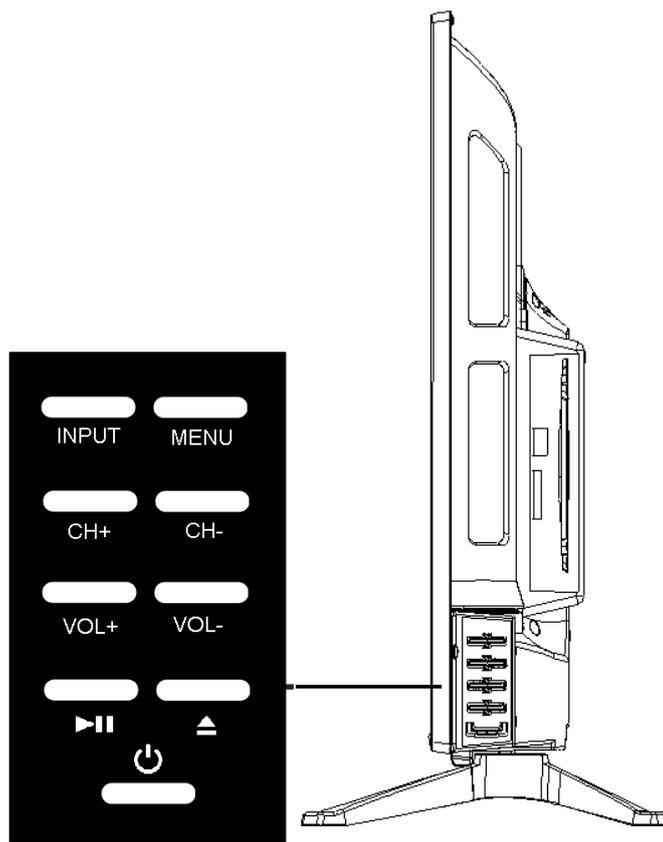

 <b>POWER BUTON</b>	To turn the TV ON/OFF
<b>INPUT BUTTON</b>	To select the input source.
<b>MENU BUTTON</b>	To enter the main menu.
<b>CH+ BUTTON</b>	To select the next channel
<b>CH- BUTTON</b>	To select the previous channel
<b>VOL+ BUTTON</b>	To increase the volume.
<b>VOL- BUTTON</b>	To decrease the volume.
 <b>PLAY / PAUSE BUTTON</b>	To start or pause playback.
 <b>EJECT BUTTON</b>	To eject the DVD from the internal drive.


# BUTTON FUNCTIONS

## INPUT / OUTPUT TERMINALS

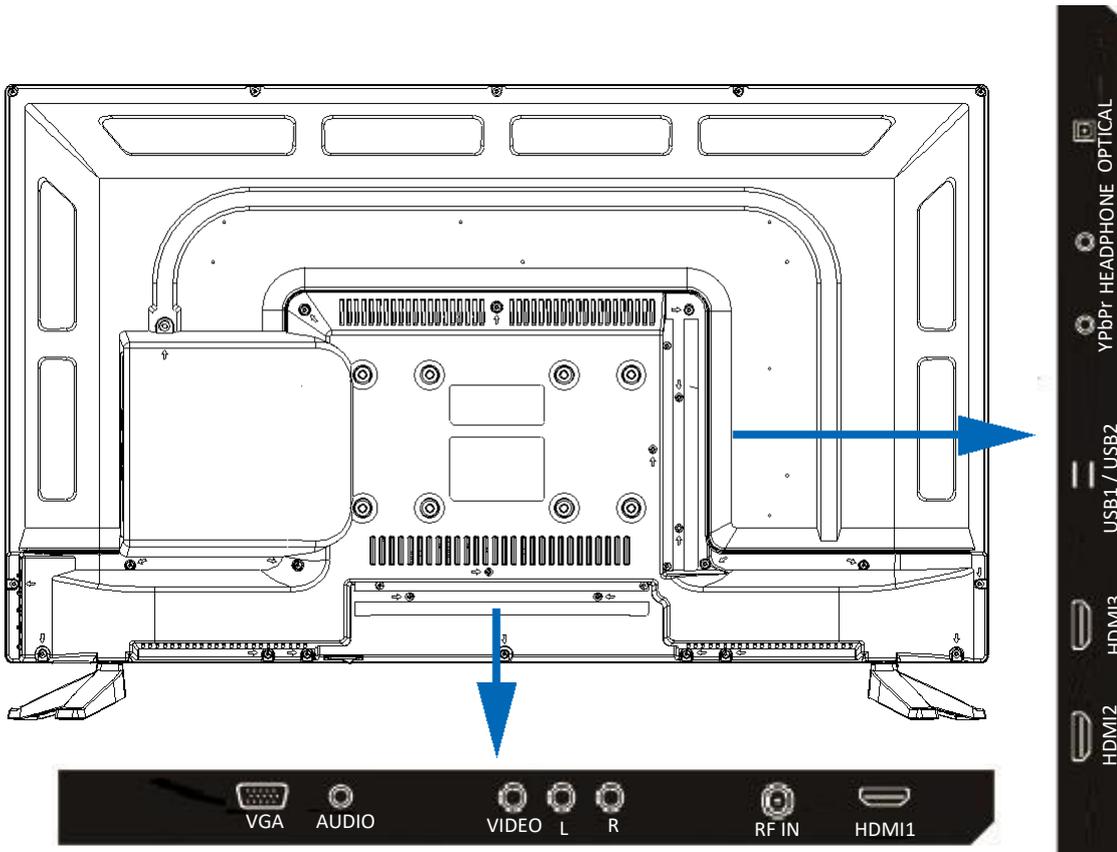


<b>VGA</b>	PC Video input.	
<b>AUDIO</b>	PC Audio input.	
<b>VIDEO</b>	Video input	Composite Video – can be used for connecting older equipment
<b>L</b>	Left Audio input	
<b>R</b>	Right Audio input	
<b>RF IN</b>	Antenna connection.	
<b>HDMI1-3</b>	For connecting DVD players, set top boxes, games consoles, etc.	
<b>USB x2</b>	Provides access to SMART TV. Connect smart remotes, keyboards, gaming accessories or USB flash drive for DTV recording, timeshift or media playback. Only connect low power USB flash drives or externally powered hard drives to the USB ports as they only provide 0.5 Amps power.	
<b>Mini YPbPr Input</b>	Connect to the YPbPr video output terminal of the DVD player	
<b>Headphone</b>	Connect headphones, or can be used for compatible Soundbars / audio equipment.	
<b>OPTICAL</b>	Digital audio output, for use with compatible sound bars / audio equipment.	

# CONNECTING TO EXTERNAL DEVICES

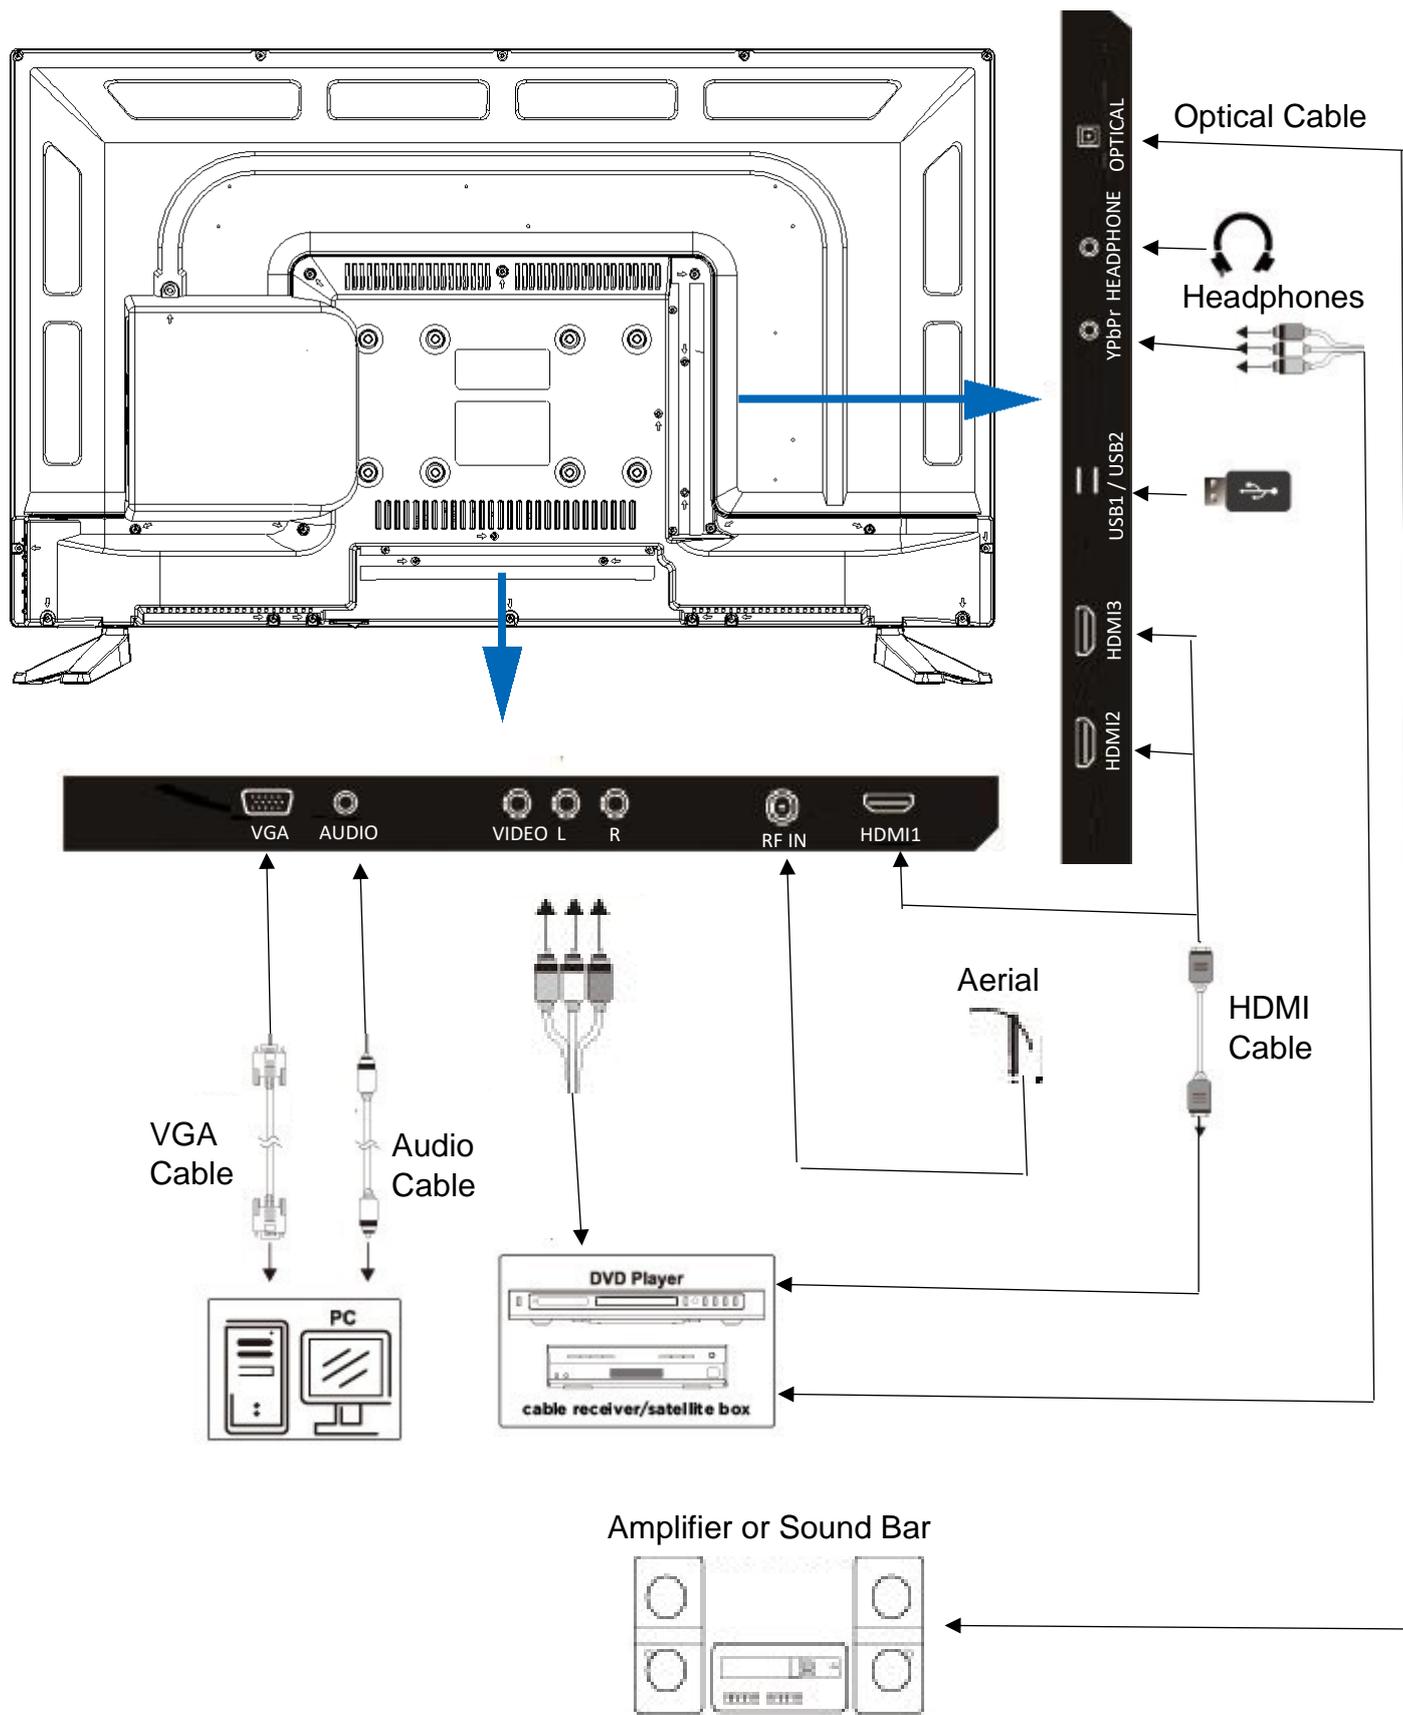


# REMOTE CONTROL

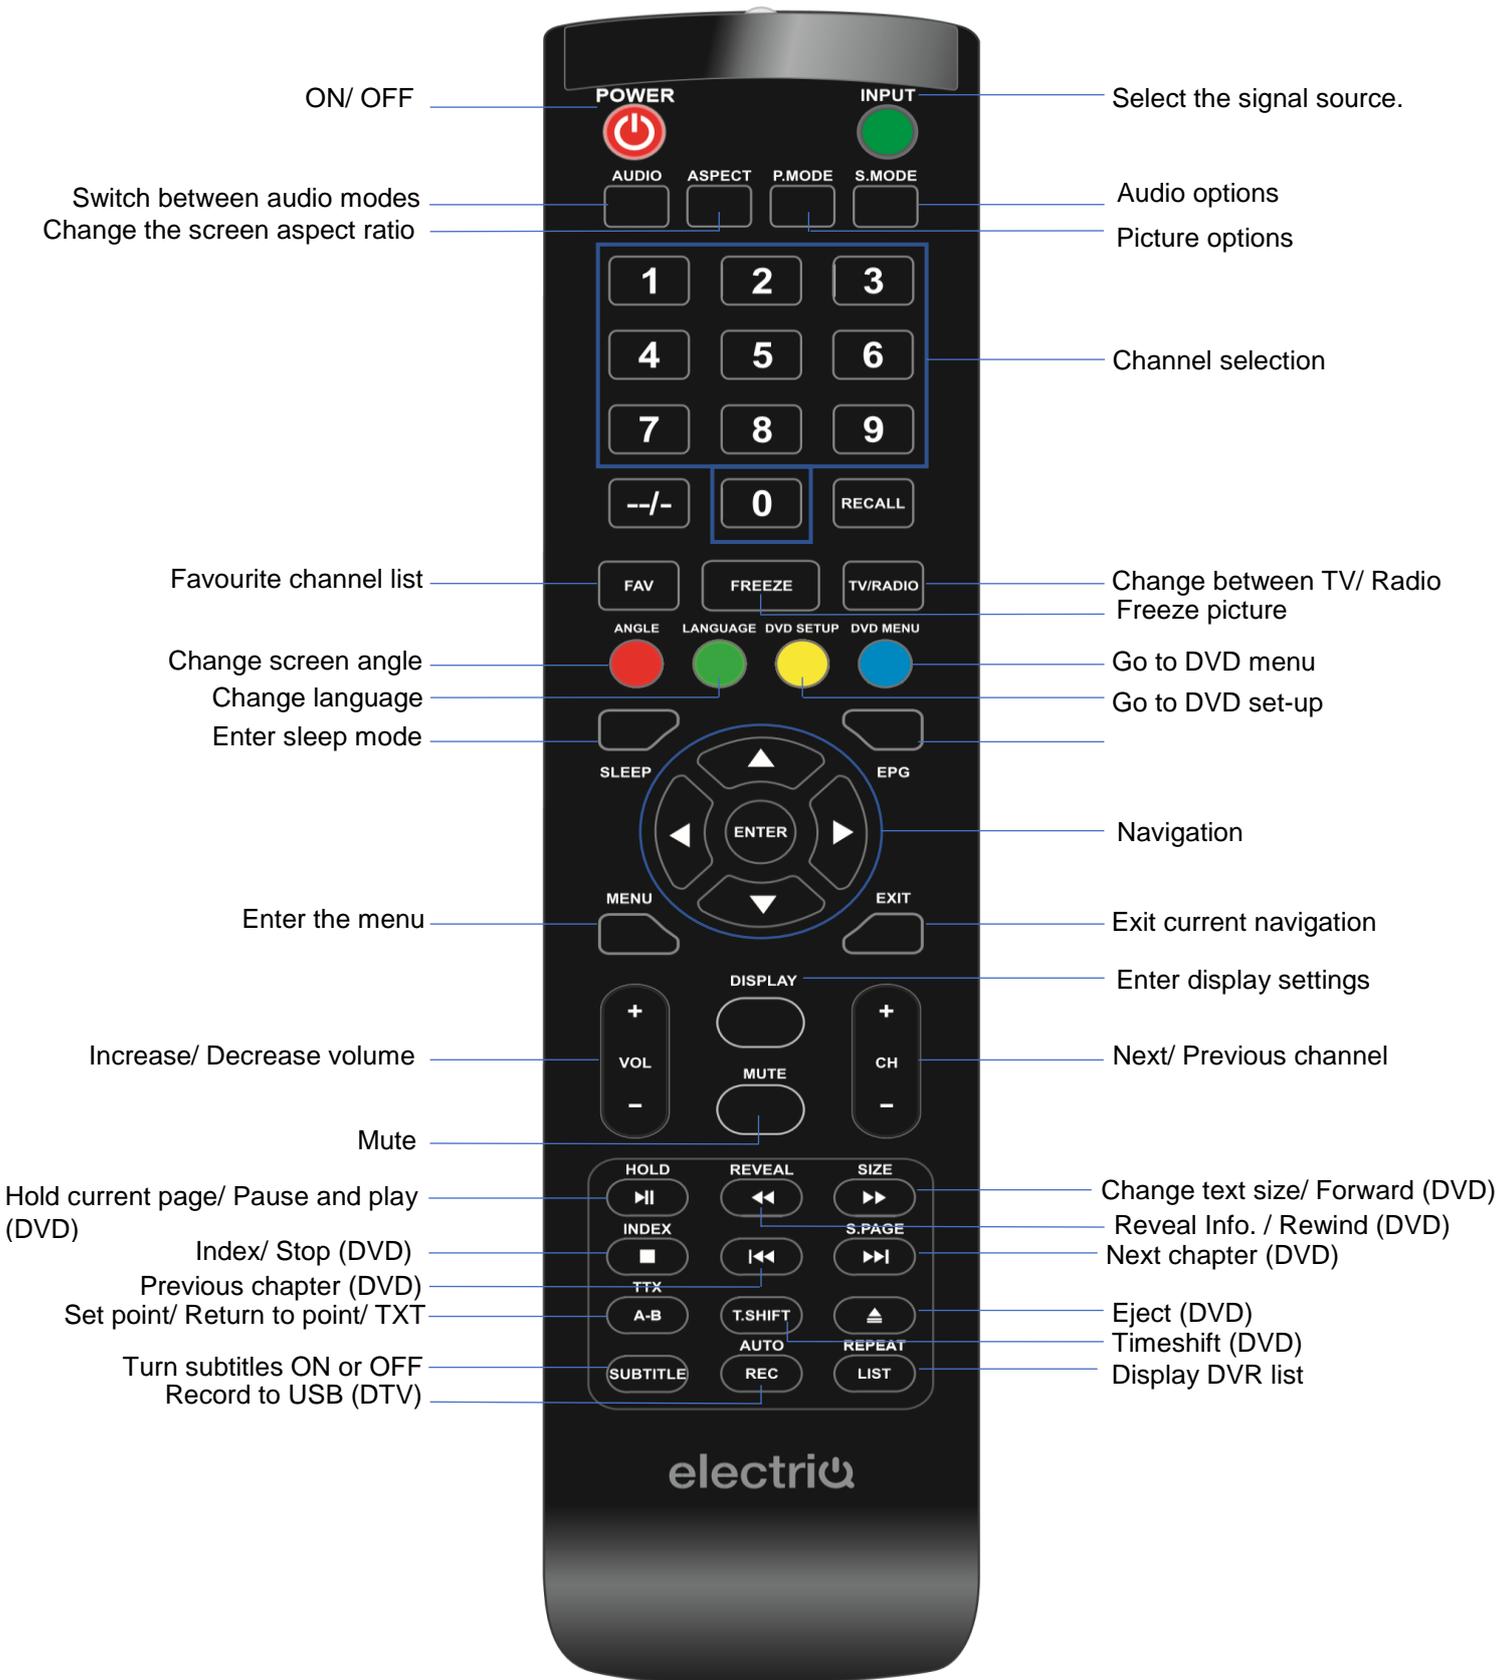

## INSTALLATION OF BATTERIES

- 1 Remove the battery cover from the rear of the remote control.
- 2 Install two AAA 1.5V batteries. (Ensure the correct polarity of the batteries.)
- 3 Replace the battery cover.

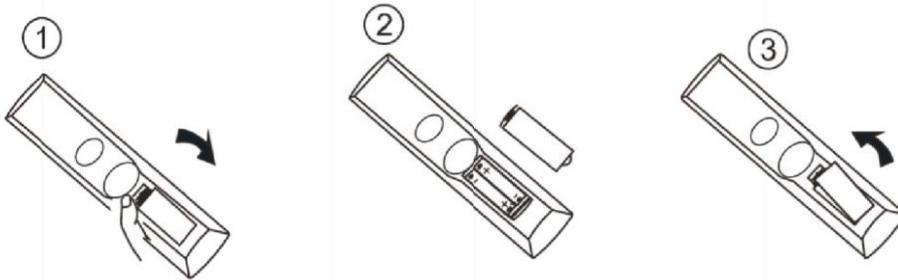


Please take out of the batteries from the remote when it is not going to be used for a long period of time.

If the remote control doesn't work properly, please carry out the following checks.

- Check the TV is turned on.
- Check the polarity of the batteries are correct.
- Check the batteries and replace if necessary
- Check the plug is fully inserted and the socket is switched on.
- Check there are no special fluorescent light or neon light which could interfere with remote signals.

## INITIAL SETUP

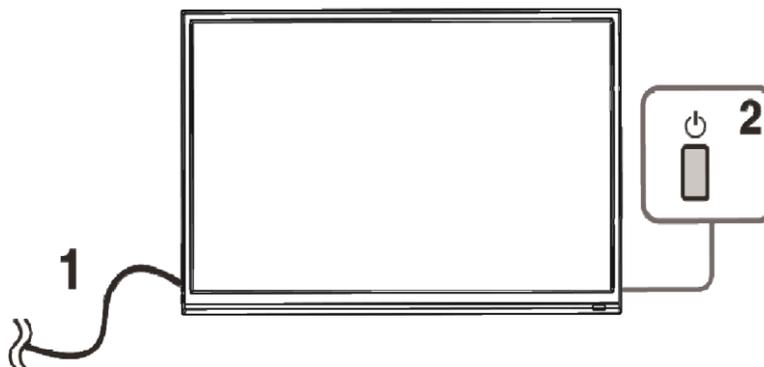

1. Connect your TV to the power outlet.
2. Connect your aerial and/or set top box to the television.
3. Press the POWER button on the remote to turn on the TV.  
**CAUTION:** Always disconnect the TV from the power outlet when the TV will not be used for a long period of time. The POWER button on the television and remote is only used for switching the TV into standby and does not disconnect the device from the mains voltage. To completely disconnect the mains voltage, please remove the plug from the socket.
4. Use the ▼/▲/◀/▶ buttons on the remote to follow the setup guide on screen.

# FIRST TIME SETUP

Press the **INPUT** button to display the input source list.  
 Press the **▼ / ▲** or **OK** button to select the input source  
 Press the **OK** button to select the input source,  
 Press the **EXIT** button to quit.



## Select OSD Language

Use the **▼ / ▲ / ◀ / ▶** buttons to highlight the OSD Language.

Press the **ENTER** button to select the OSD Language you want to.

## Select Country

Use the **▼ / ▲ / ◀ / ▶** buttons to highlight your Country.

Press the **ENTER** button to select the Country



## Auto Tuning

The DTV tuning can be skipped by pressing the Menu button then the left arrow button.

# CHANNEL MENU

Press **MENU** button to display the main menu.


Use the ◀ / ▶ buttons to select **CHANNEL** in the main menu.



1. Use the ▼ / ▲ buttons to select the option that you want to adjust in the **CHANNEL** menu.
2. Press the **Enter** button to adjust.
3. After finishing your adjustment, Press the **Enter** button to save and return to the previous menu.


## Auto Tuning

Use the ▼ / ▲ buttons to select **Auto Tuning**, then press **Enter/▶** button to enter.

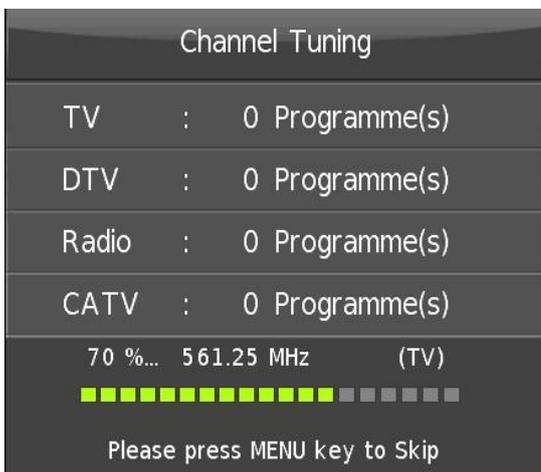

## ATV Manual Tuning

Use the ▼ / ▲ buttons to select ATV Manual Tuning, then press **Enter** button to enter the sub-menu.

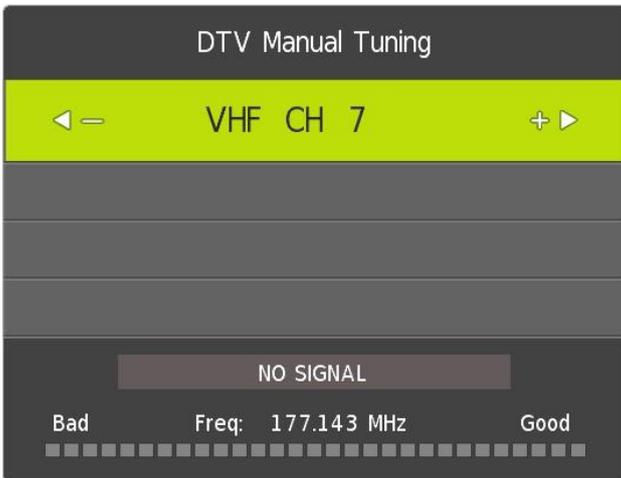

## DTV Manual Tuning

Use the ▼ / ▲ buttons to select DTV Manual Tuning, then press the **Enter** button to enter the sub-menu.

## Program Edit

Use the ▼ / ▲ buttons to select Program Edit, then press the **Enter** button to enter the sub-menu.

The three coloured buttons are the shortcut buttons for channel programming


Use the ▼ / ▲ to highlight the channel you want to select, then:

Press the **Red** button to delete the program in the list.

Press the **Blue** button to skip the selected channel.

Press **Fav** button to add or remove the channel from your favourite list.

(Your TV set will skip the channel automatically when using CH+/- to view the channels.)

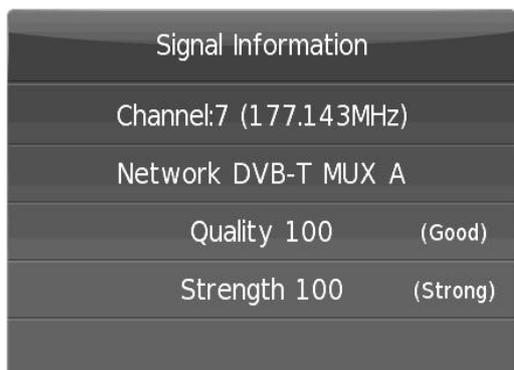

## Signal Information

Use the ▼/ ▲ buttons to select **Signal Information**, press the **Enter** button to see detailed information about the signal. Only available when there is a DTV signal.

# PICTURE MENU

Press the **MENU** button to display the main menu.

Use the ◀ / ▶ buttons to select **PICTURE** in the main menu.




1. Use the ▼ / ▲ buttons to select the option that you want to adjust in the **PICTURE** menu.
2. Press **OK** button to adjust.
3. After finishing your adjustment, Press the **MENU** button to save and return to the previous menu.

## Picture Mode

Use the ▼ / ▲ button to select Picture Mode, then press the **OK** button to enter sub-menu.

You can change the value of contrast, brightness, colour, sharpness and tint when the picture is in **Personal** mode.

**TIP:** You can press the PMODE button to change the Picture Mode directly.

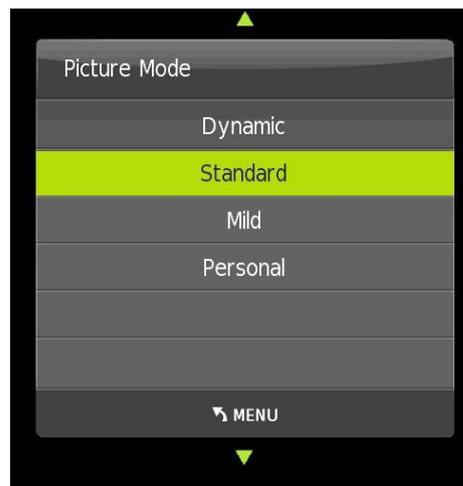

## Contrast/ Brightness/ Colour/ Tint / Sharpness

Use the ▼ / ▲ buttons to select an option, then use the ◀ / ▶ buttons to adjust.

<b>Contrast</b>	Adjust the highlight intensity of the picture, but the shadow of the picture is unchanged.
<b>Brightness</b>	Adjust the optical output of the entire picture, it will affect the dark region of the picture.
<b>Colour</b>	Adjust the saturation of the colour based on your preference.
<b>Tint</b>	Use a compensating colour changed with the transmission in the NTSC code.
<b>Sharpness</b>	Adjust the detail of the picture.

## Colour Temperature

Change the overall colour cast of the picture.

Use the ▼/ ▲ buttons to select Colour Temperature, then press **OK** to enter the sub-menu.


Use the ◀ / ▶ buttons to select between Cool, Normal and Warm.

You can change the red, green and blue values when the colour temperature is set to **User** mode.


**Cold:** Increase the blue tone for the white.

**Normal:** Increase the linked colours for the white.

**Warm:** Increase the red colour for the white.

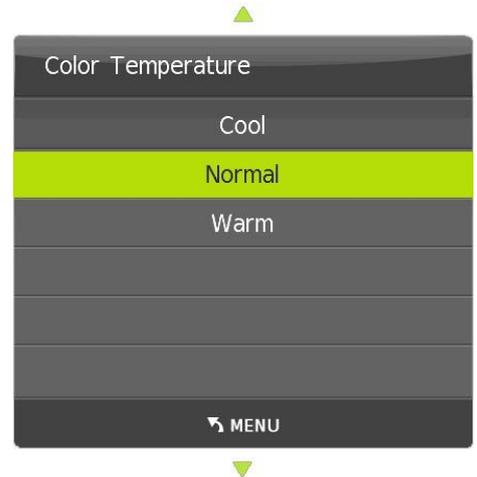

## Noise Reduction

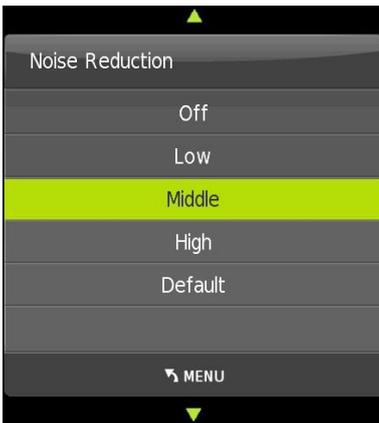

To filter out and reduce the image noise and improve the picture quality.

Use the ▼/ ▲ buttons to select Noise Reduction, then press **OK** to enter the sub-menu.

# SOUND MENU

Press the **MENU** button to display the main menu.  
Use the ◀ / ▶ buttons to select **SOUND** in the main menu.



1. Use the ▼ / ▲ buttons to select the option that you want to adjust in the **SOUND** menu.
2. Press the **Enter** button to adjust.
3. After finishing your adjustment, Press **Enter** button to save and return to the previous menu.

## SOUND MODE

Use the ▼ / ▲ buttons to select Sound Mode, then press **Enter** to enter the sub-menu.

Use the ▼▲ button to select.

You can adjust the Treble and Bass when the sound is in Personal mode.

TIP: You can press **SMODE** button on the remote control to change the Sound Mode.

- Standard: Produces a balanced sound in all environments.
- Music: Preserves the original sound. Good for musical programs.
- Movie: Enhances treble and bass for a rich sound experience.
- Sports: Enhances vocals for sports.
- Personal: Select to customize picture settings.


**NOTE:** The treble and bass are only available in **User** mode, you can adjust them as you like.

The Balance, Auto Volume level, surround sound, Digital audio output and SPDIF audio delay can be selected using the ▼ / ▲ button to select option, Press ◀ / ▶ button to adjust.

### NOTE:

**Balance:** Adjusts the speaker's output between the speakers, it enables you to listen to best at your position.

**Auto Volume:** Used for reducing the difference between channel and program's volume automatically.

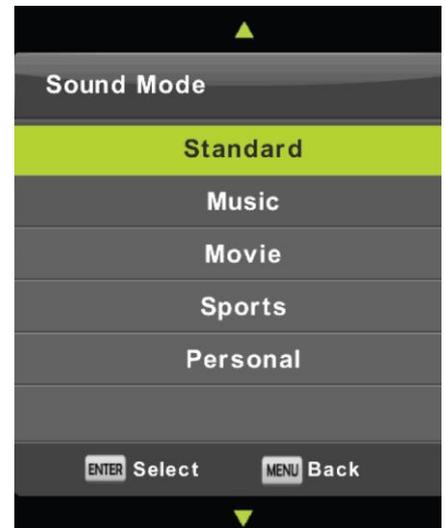

# TIME MENU

Press the **MENU** button to display the main menu.  
Use the ◀ / ▶ buttons to select **TIME** in the main menu.




1. Use the ▼ / ▲ buttons to select the option that you want to adjust in the **TIME** menu.
2. Press **Enter** button to adjust.
3. After finishing your adjustment, Press the **Enter** button to save and return to the previous menu.

## Sleep Timer

Use the ▼ / ▲ buttons to select the Sleep Timer, then press **Enter** to enter the sub-menu.

Use the ▼ / ▲ buttons to select between 15min,30min,45min,60min, 90min,120min and 240min

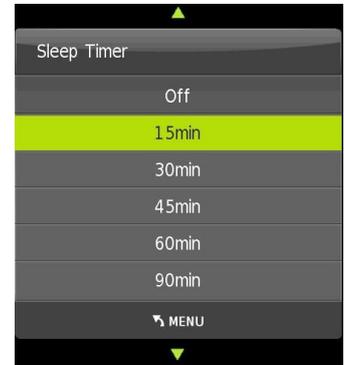

## Auto Standby

Use the ▼ / ▲ buttons to select Auto Standby, then press the **Enter** button to enter the sub-menu.

Use the ▼ / ▲ buttons to select.

Tip: Use of the remote control will affect the standby timer. If any buttons are pressed, the timer will restart.

## Time Zone

Use the ▼ / ▲ buttons to select the Time Zone, then press **Enter** to enter sub-menu.

Use the ▼ / ▲ / ◀ / ▶ buttons to select time zone.



## OSD Timer

Use the ▼ / ▲ buttons to select OSD Timer, then press the **Enter** button to enter the sub-menu.

Use the ◀ / ▶ buttons to select.

# LOCK MENU

Press the **MENU** button to display the main menu.

Use the ◀ / ▶ buttons to select **Lock** in the main menu.



1. Use the ▼/ ▲ buttons to select the option that you want to adjust in the **LOCK SYSTEM** menu.
2. Use the **Enter**/◀ / ▶ buttons to adjust.
3. After finishing your adjustment, Press **MENU** button to return back to the previous menu




## Lock System

Use the ▼/ ▲ buttons to select Lock System, then press **Enter** and enter the password.

The default password is 0000. Please contact the manufacturer for assistance if this is forgotten

## Set Password

Use the ▼ / ▲ buttons to select Set Password, then press the **Enter** button to enter sub-menu to set new password.

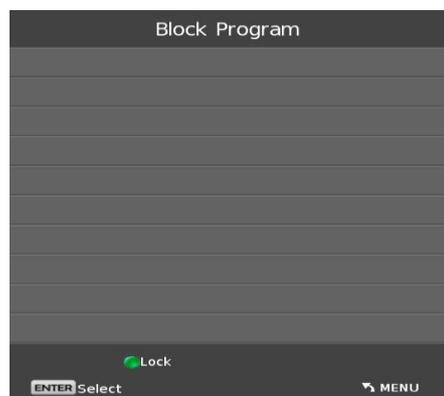

## Block Program

Use the ▼ / ▲ buttons to select **Block Program** then press **Enter** button to enter the sub-menu to select.

Press the **Green** button to lock or unlock the channel.



## Key Lock

Use the ▼ / ▲ buttons to select Key Lock, then use the ◀ / ▶ buttons to select Off or On. When Key Lock is on, the buttons on the TV are locked.

# SETUP MENU

Press the **MENU** button to display the main menu.

Use the ◀ / ▶ buttons to select **SETUP** in the main menu.




1. Use the ▼ / ▲ buttons to select the option that you want to adjust in the **SETUP** menu.
2. Press the **Enter** button to adjust.
3. After finishing your adjustment, Press **Enter** button to save and return to the previous menu.

## OSD Language

Select the OSD menu language to be displayed. The default is English.

Use the ▼/ ▲/ ◀ / ▶ buttons to select Menu Language.

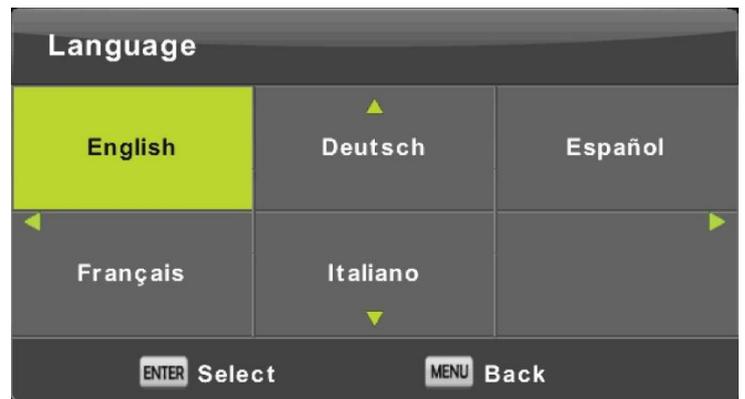

## PVR File System

Use the ▼/ ▲ buttons to select PVR File System, then press **Enter** to enter the sub-menu. Use the ▼/ ▲ buttons to select Check PVR File System, then press **Enter** to enter. It will then check the speed of the USB.



## Aspect Ratio

Use the ▼/ ▲ buttons to select Aspect Ratio, then press the **Enter** button to enter sub-menu. Use the ▼/ ▲ buttons to select aspect ratio between Auto, 4:3, 16:9, Zoom1 and Zoom2.

## Blue Screen (When no input signal)

Use the ▼/ ▲ button to select Blue Screen, then press **Enter** button to turn On or Off.

## **First Time Installation**

Use the ▼/ ▲ buttons to select First time installation, then press **Enter** to enter.

## **Caption**

Use the ▼/ ▲ buttons to select Caption, then press **Enter** to turn on or off.

## **Software Update (USB)**

Use the ▼/ ▲ buttons to select Software Update (USB), plug your USB device in the USB slot, then press **Enter** to update the software.

## **Restore Factory Default**

Use the ▼/ ▲ buttons to select Restore Factory Default, then press **Enter** to Select Restore Factory Default

# SCREEN MENU (PC MODE ONLY)

Press the **MENU** button to display the main menu.

Use the ◀ / ▶ buttons to select **SCREEN** in the main menu.



1. Use the ▼ / ▲ buttons to select the option that you want to adjust in the **SCREEN** menu.
2. Press the **Enter** button to adjust.
3. After finishing your adjustment, Press the **Enter** button to save and return to the previous menu.

## Auto Adjust

Press the **Enter** button to start adjusting **H-Offset/V-Offset/Size/Phase** automatically.

## Horizontal Pos.

Adjust the horizontal position of the picture.

Use the ▼/ ▲ buttons to select **Horizontal Pos.**, then press **Enter** to enter the sub-menu.

## Vertical Pos

Adjust the vertical position of the picture.

Use the ▼/ ▲ buttons to select **Vertical Pos.**, then press **Enter** to the enter sub-menu.

## Size

Adjust the display size.

Use the ▼/ ▲ buttons to select **Size**, then press **Enter** to enter the sub-menu.

## Phase

Adjust the horizontal interfering lines.

Use the ▼/ ▲ buttons to select **Phase**, then press **Enter** to enter the sub-menu.

## Position Reset

Use the ▼/ ▲ buttons to select **Position Reset**, then press **Enter** to enter.

# MEDIA MENU

To enter the **Media** menu, a USB device should be inserted, and the INPUT button used to set the Input Source to **Media**



Use the ◀ / ▶ buttons to select the option you want to view in the **Media** menu, then press **Enter** to enter.

## Photo


Use the ◀ / ▶ buttons to select PHOTO in the main menu, then press **Enter** to enter. Press the **Exit** button to return to the previous menu and exit menu to quit.



Use the ◀ / ▶ buttons to select the file you want to watch within the **menu**, then press the media button to display the picture. When highlighting the option, the file information will appear on the right and picture will be previewed in the centre.

## Music Menu

Use the ◀ / ▶ buttons to select MUSIC in the main menu, then press **Enter** to enter. Press **Exit** to return to the previous menu and exit menu to quit.

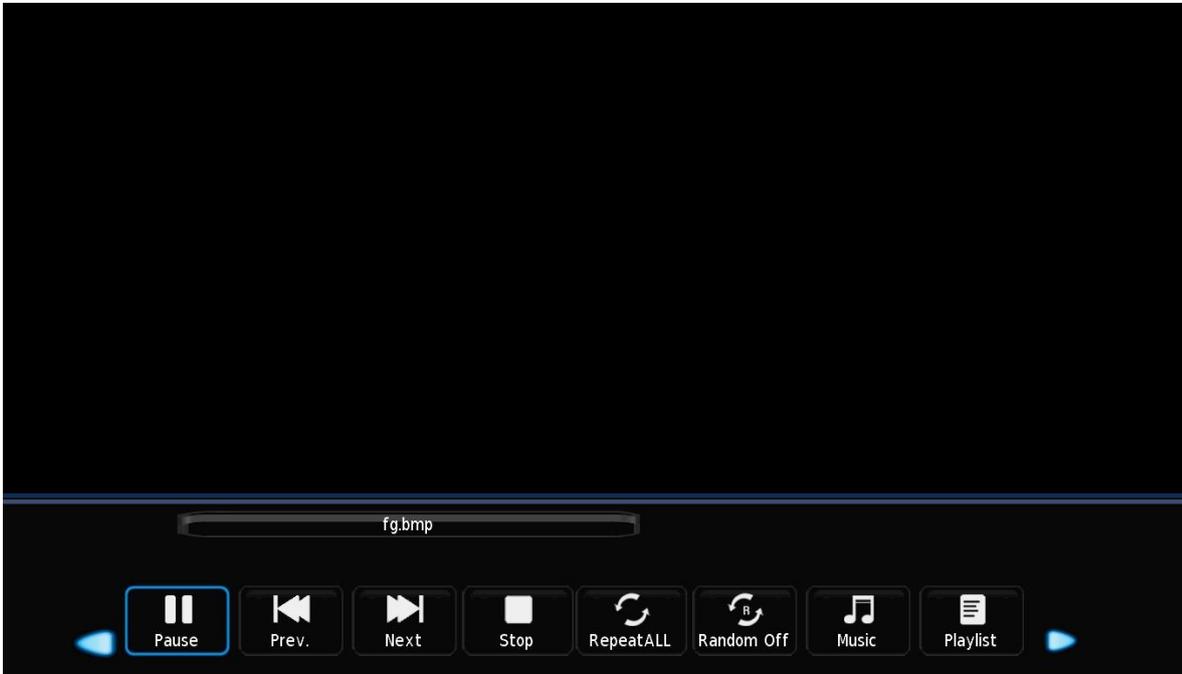

Use the ◀ / ▶ buttons to select the drive you want to watch, then press **Enter** to enter. Use the ◀ / ▶ buttons to return to the previous menu.




# Movie Menu

Use the ◀ / ▶ buttons to select MOVIE in the main menu, then press **Enter** button to enter. Press **Exit** button to return to the previous menu and exit menu to quit.



Use the ◀ / ▶ buttons to select the drive you want to watch, then press **Enter** to enter. Press media button to play the selected movie.

Press display to select the menu at the bottom you want to run, then press **Enter** button to operate.

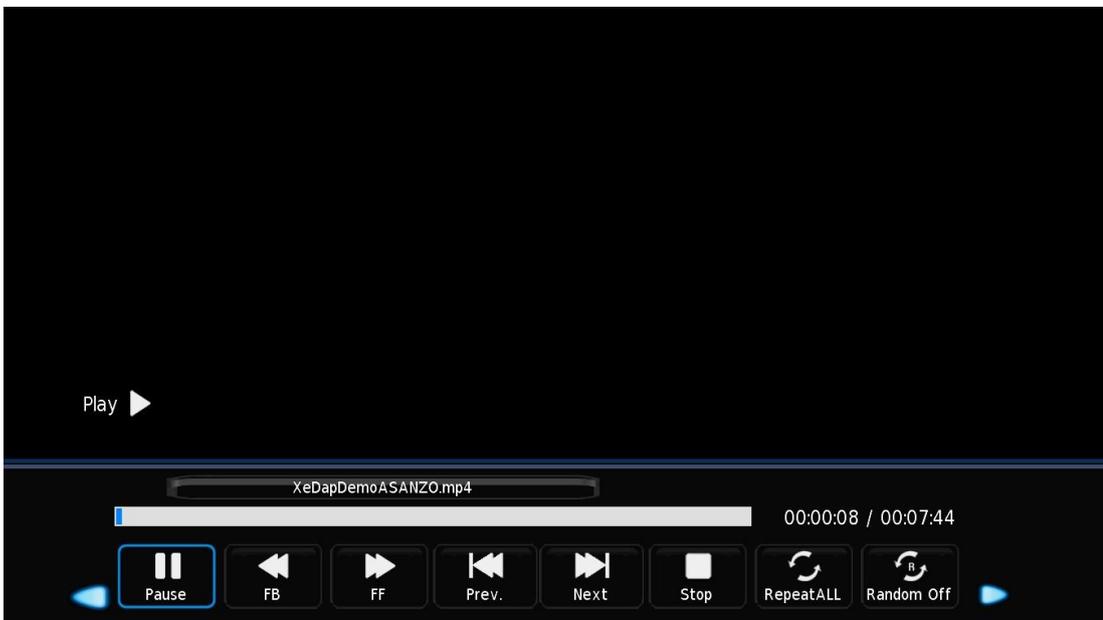

Press **Exit** to go back to the previous menu and the exit button again to quit the entire menu.

## Text Menu

Use the ◀ / ▶ buttons to select TEXT in the main menu, then press **Enter** button to enter. Press **Exit** to return to the previous menu and exit menu to quit.



Use the ◀ / ▶ buttons to select the drive you want to watch, then press the **Enter** button to enter.


Use the ◀ / ▶ buttons to select return option to back to the previous menu.



# DVD

The DVD settings menu is operated using arrows on the remote control. Use the ▼ / ▲ buttons to select an item within the menu and the ◀ / ▶ buttons to adjust it.

## General Settings Page

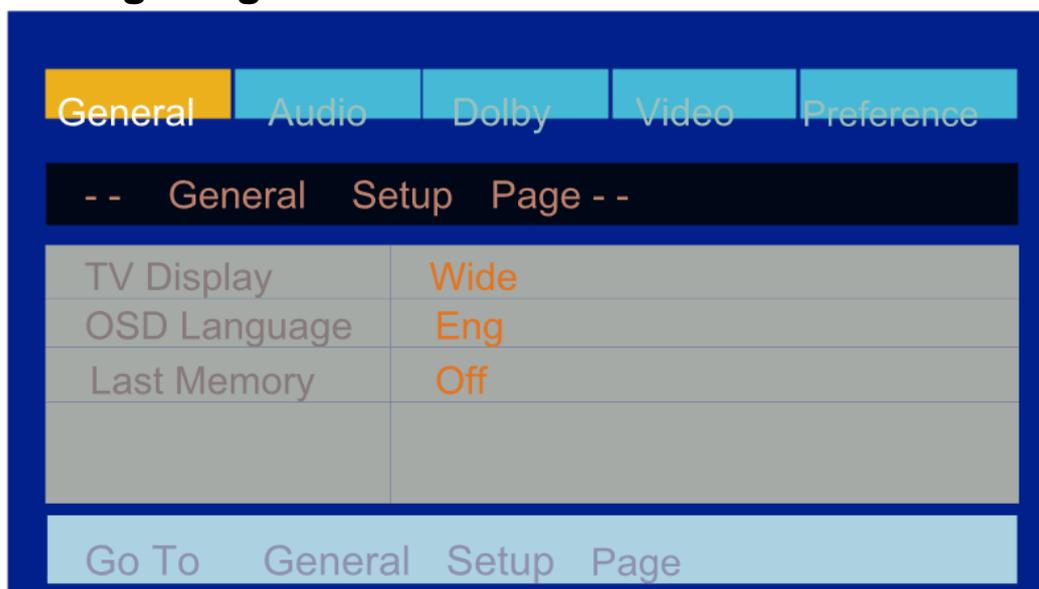

### TV Display

Some DVD discs have been authored in 4:3 aspect ratio format. To see the material in its original mode, you may need to change the Aspect ratio.

**Pan & Scan (4: 3)** Black edges left and right will be seen.

**Letterbox (4: 3)** Top and bottom of the screen may be black.

**Wide 16:9 (Widescreen)** Full width picture but may have black areas top and bottom.

**OSD Language.** Select the OSD Language (English is default).

**Last Memory. ON/OFF.** You may wish the player to remember where it finished playing a disc and then remove the disc. When you stop the disc, the player will automatically remember the point it finished playing. When the disc is re inserted the player will continue from the same point.

### Audio Setup

When the DVD menu is displayed, the DVD system will auto pause. Press SETUP again, it will go on.


Press the SETUP button on remote control during playing DVD, Press the ◀ / ▶ buttons the following menu is shown.

Press the ▼ / ▲ buttons to choose the option, then enter the desired option using the OK button. It has been set when the desired item becomes red.

Note: Press the Left button to return to the previous menu.


Press SETUP to exit the menu.

## Dolby Setup

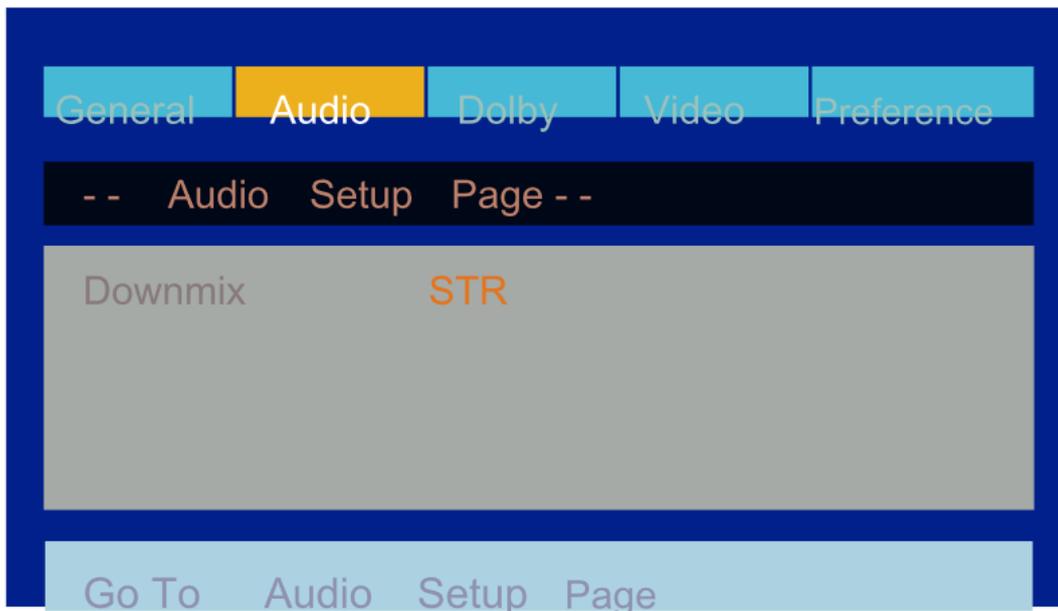

**Dynamic** is the difference between the maximum level and the minimum level of sound. This function is generally used when playing high volume programs at night, in order not to disturb the neighbour. This setting can lower the volume while keeping the original tone quality. This is the range, measured in decibels(dB), between the loudest and the quietest sound registered in a soundtrack.

## Video Setup

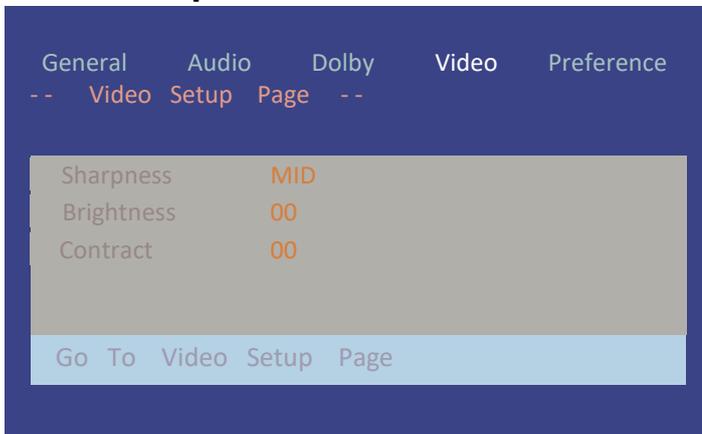

**Sharpness:** Adjust the sharpness of the image.


**Brightness:** Select 'Brightness' by using the ▼ / ▲ buttons, then press OK. You can adjust the Brightness by using the ◀ / ▶ buttons. To exit the 'Brightness' setting, press OK again.

**Contract:** Select 'Contract' by using the ▼ / ▲ buttons, then press OK to select.

You can adjust the Contrast using the ◀ / ▶ buttons.

To exit 'Contrast' To exit the 'Brightness' setting, press OK again.

## Preference Setup

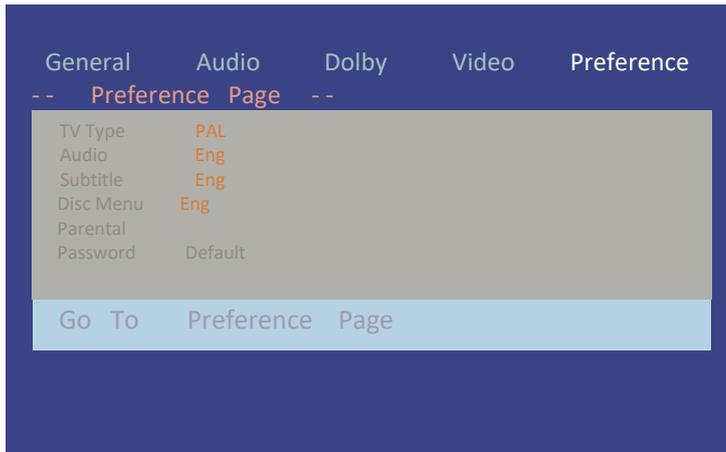

### TV Type

Select between PAL, AUTO or NTSC.

### Audio

Select the preferred language for DVD audio.

1. The selected language is assigned high priority and can therefore be adopted automatically when the player begins playing a disc.
2. Languages vary between discs, depending on the DVD. You can also select alternative languages by pressing the AUDIO button on the remote

### Subtitle

Selects the preferred language for subtitles recorded on Discs.

1. The selected subtitle language is assigned high priority and can therefore be adopted automatically when the player begins playing a disc.
2. Subtitles vary between discs, depending on the Discs. You can also select alternative subtitle language by pressing the SUBTITLE button on the remote.

### Disc Menu

Select the preferred language for the disc menu recorded on the Discs. This choice varies between Discs.

### Parental

It is possible to restrict playback of certain Discs to a certain level of user, based on their age, for example. Certain scenes can be blocked or replaced with different scenes. The "Parental Control" function lets you set the access control level. This function is password-protected.

Note: If you play discs that do not support the Parental Control function, the DVD player cannot restrict access to the disc.

### Password

Change the password. The default password is 0000.

### Default

Restore the DVD player's system to factory default settings.

# TECHNICAL SPECIFICATION

Product Model		eiQ-32HDT2DVD
Screen Size		32" Diagonal
Aspect Ratio		16:9
Power Supply		AC 100-240V, 50/60Hz
Power Consumption		65W
TV System		PAL DVB-T2/T/C (There is no DVB-C signal in some Countries or Areas.)
Audio Output Power (Internal)		2 x 8W
Picture	Maximum Resolution	1366x768
	Brightness	200 cd/m <sup>2</sup>
	Static Contrast	4000:1
	Response time	8ms
Input Terminal	Antenna Input	X1
	USB Input	X2
	HDMI Input	X3
	VGA Input	X1
	PC AUDIO Input	X1
	Audio Input (L/R)	X1 (Mini AV)
	Video Input	X1 (Mini AV)
	YPbPr Input	X1 (Mini)
	RJ45 Input	NO
	CI card In	NO
	SCART In/Output	NO
	DC In (12V)	NO
	CARD SLOT	NO
	Output Terminal	Earphone
Audio Line Out(L/R)		NO
Video Output		NO
Optical		X1 (Digital)
Coaxial out		NO
Working Temperature		0°C ~40°C
Working Humidity		20% ~ 80% Non-condensing

**NOTE:** Due to continued product development the specification shown above may change without notice.

## SIMPLE TROUBLESHOOTING

If the display fails or the performance changes dramatically, check the display in accordance with the following instructions. Remember to check the peripherals to pinpoint the source of the failure.

Symptom	Solution
Power cannot be turned on. (Power indicator does not illuminate.)	-Check that both ends of the power cable are plugged into the socket appropriately and the wall socket is operational
No Input Signal message appears.	-Check that the aerial cable is connected properly. -Check that the power of the relevant peripherals is turned on. -Check that the selected source matches the input.
The remote control does not function properly.	-Check the batteries are not drained. (Use new batteries.) - Check that the remote control is within the operating range. - Check that the remote control is pointed to the remote-control window on the display. -Check that there are no obstacles between the remote control and the remote-control window.
Flashing spots or stripes appear on the screen.	-Check that there is no emission (Car, HV cable or Neon lamp) or other possible interference sources.
Image colour or quality deteriorates.	-Check that all the video settings are adjusted appropriately, such as brightness, contrast, colour etc. -For more information about video settings, refer to OSD Functions
Screen position and size are incorrect.	-Check that the screen position and size is adjusted appropriately.
Image or colour is incorrect.	-Check that the signal line is connected properly. -When connecting to a PC, you can change the resolution of the PC to acquire the correct image. The discrepancy of the PC output signal may affect the display of the image.
Display warning message.	-Check that the input signal line is properly fixed. -Select the correct input signal. -For more information, refer to Supported Signal Modes

## EU DECLARATION OF CONFORMITY

Hereby, electriQ declares that this television is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

<https://www.electriQ.co.uk/content/declaration-of-conformity>

## electriQ UK SUPPORT

Complete online support form on [www.electriQ.co.uk/support](http://www.electriQ.co.uk/support)

Service Line: 0871 620 1057

Office hours: 9AM - 5PM Monday to Friday

Unit J6, Lowfields Business Park,  
Lowfields Way, Elland  
West Yorkshire, HX5 9DA

## PRODUCT DISPOSAL



Do not dispose this product as unsorted municipal waste. Collection of such waste must be handled separately as special treatment is necessary.

Recycling facilities are now available for all customers at which you can deposit your old electrical products. Customers will be able to take any old electrical equipment to participating civic amenity sites run by their local councils. Please remember that this equipment will be further handled during the recycling process, so please be considerate when depositing your equipment. Please contact the local council for details of your local household waste recycling centres.